

## Consumption values


### Consumption values table

Program	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
		8 kg	4 kg	8 kg	4 kg
<b>Cottons</b>					
Cupboard Dry*	1400 rpm	115 min	65 min	4.41 kWh	2.49 kWh
	1000 rpm	137 min	79 min	4.63 kWh	2.61 kWh
	800 rpm	159 min	93 min	4.85 kWh	2.73 kWh
Iron Dry*	1400 rpm	86 min	48 min	3.39 kWh	1.91 kWh
	1000 rpm	108 min	62 min	3.61 kWh	2.03 kWh
	800 rpm	130 min	76 min	3.83 kWh	2.15 kWh
<b>Easy-Care</b>					
Cupboard Dry*	800 rpm	3.5 kg		3.5 kg	
	600 rpm	46 min		1.42 kWh	
		56 min		1.75 kWh	



\* Program setting for testing in accordance with the applicable EN61121 standard.  
 \*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the laundry, the degree of dryness that has been set, the amount of laundry being loaded, the environmental conditions, and any additional functions that have been activated.

### Most efficient programme for cotton fabrics


The following "standard cottons programme" (identified with ) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

Standard programmes for cottons in accordance with current EU regulation 932/2012			
Programme	Load	Energy consumption	Programme length
 Cottons Cupboard Dry	8 kg/4 kg	4.63 kWh/2.61 kWh	137 min./79 min.

Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

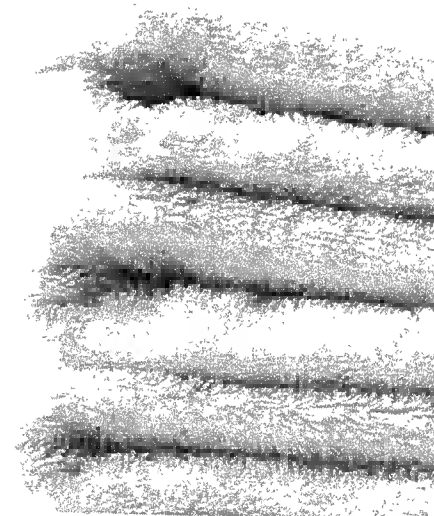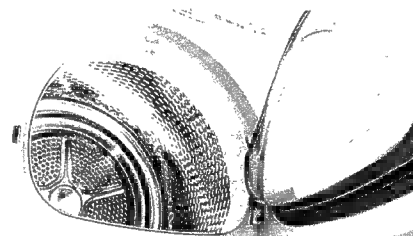

Register your new Bosch now:  
[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)

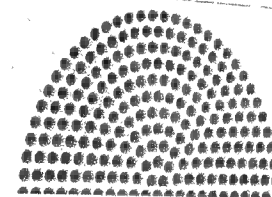

**Tumble dryer  
 WTN83200GB**



## Installation and connection


### Scope of delivery

- Dryer
- Installation and operating instructions
- Basket for woollens\*
- Condensation drain\*

### Installing and connecting the dryer

#### **Warning** Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

- Check the dryer for visible damage. You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use earth-leakage circuit breakers with the following symbol: 
- Ensure that the mains cable is not kinked or trapped, and that it does not come into contact with heat sources or sharp edges.

#### **Warning**

#### Children may lock themselves in the dryer, putting their lives at risk!

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening.

#### **Caution!**

#### Risk of injury

- Due to the heavy weight of the dryer, you may injure yourself if you lift it. Do not lift the dryer on your own.

\* Depending on the model

- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed. Do not move the dryer by holding onto protruding parts.

#### **Caution!**


#### Risk of material damage to the dryer or fabrics.

- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer. Do not install the dryer in rooms that are at risk of frost.

During installation, ensure that:

- The dryer is placed on a clean, level and firm surface,
- The mains plug can be accessed at all times,
- The air inlet on the dryer is kept clear and there is sufficient ventilation,
- The area around the dryer is kept clean and
- The dryer is levelled using the threaded feet.

**Note:** Check the alignment of the appliance with a spirit level and correct if necessary. Change the height by turning the appliance feet. All appliance feet must stand firmly on the ground.

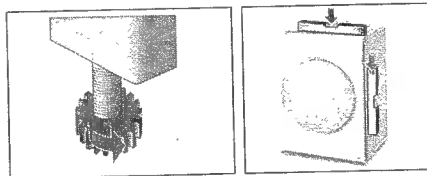

Incorrect alignment may cause high noise levels, vibrations and improper movement of the drum.

**Note:** If in doubt, have the appliance connected by a specialist.

Faults	Cause/remedy
Drying time too long?	<ul style="list-style-type: none"> <li>■ The fluff filter may be dirty and cause a longer drying time. Clean the fluff filter.</li> <li>■ The heat exchanger may be dirty and cause a longer drying time. Clean the heat exchanger.</li> <li>■ If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed.</li> <li>■ If the ambient temperature is higher than 35 °C, this may extend the drying time.</li> <li>■ Insufficient air circulation in the room may increase the drying time. Ventilate the room.</li> </ul>
Displayed drying time changes during drying process.	Not a fault. The dryer recognizes the load and adapts the remaining program duration.
Humidity in the room increases.	Not a fault. Make sure the room is sufficiently ventilated.
Power cut.	The drying program is interrupted. Remove the laundry and spread it out, or restart the program.

\* depending on the model

**Note:** If you cannot rectify the fault yourself by turning the dryer off and on, please contact our after-sales service.

## ? Faults and what to do about them

Faults	Cause/remedy
☹ on the display panel and drying has been interrupted.	<ul style="list-style-type: none"> <li>■ Empty the condensate container and press the Start button → Page 22.</li> <li>■ If the optional condensation drain is installed, the drain hose may be blocked. Check the hose for deposits and flush the hose out.</li> </ul>
⊛ on the display panel.	Clean the fluff filter and/or the heat exchanger, then select the Start button → Page 24; → Page 27.
Dryer does not start.	<ul style="list-style-type: none"> <li>■ Mains plug plugged in or fuse checked?</li> <li>■ program selected? Select a program.</li> <li>■ Dryer door open? Close the door.</li> <li>■ Childproof lock activated? Deactivate the childproof lock.</li> <li>■ "Finish in" time selected? program starts after a delay.</li> </ul>
Display panel goes off and Start button flashes.	Not a fault. Energy saving mode is active → Page 12.
Creasing.	<ul style="list-style-type: none"> <li>■ Creasing occurs when you have exceeded the maximum load or selected the wrong program for the type of fabric. All the required information can be found in the program table.</li> <li>■ Remove clothes immediately after drying; creasing may occur if they are left in the drum.</li> </ul>
Water is leaking out.	Not a fault; the dryer may be positioned on an incline. Level the dryer.
Change in the programme duration displayed during drying.	Not a fault. The moisture sensors detect the remaining moisture in the load and adjust the programme length (except timed programmes).
Laundry is not dried correctly or is still too damp.	<ul style="list-style-type: none"> <li>■ After the end of the program, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse.</li> <li>■ Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier → Page 22.</li> <li>■ Select a program with a longer drying time or increase the drying level. This does not increase the temperature.</li> <li>■ Select a timed program for subsequent drying of laundry that is still damp → Page 20.</li> <li>■ If you have exceeded the maximum load for the program, the laundry may not be dried properly.</li> <li>■ Clean the moisture sensor in the drum. The sensor may become covered by a fine layer of limescale or residues of detergents and care products which then impair its function. Your laundry is not being dried correctly → Page 28.</li> <li>■ Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded.</li> </ul>

**Note:** See also the laundry tips → Page 19.

\* depending on the model

## Optional accessories

Order optional accessories\* from after-sales service:

- **Washer-dryer stack connection set:**  
To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth.  
The dryer must be secured to the washing machine using this connection set.  
Order number with pull-out worktop: **WTZ11400**;  
Order number without pull-out worktop: **WTZ20410**.
- **Platform:**  
For easier loading and unloading, use a platform to raise your dryer. Transport laundry with the integrated clothes basket integrated in the platform's pull-out drawer.  
Order number: **WMZ20500**.
- **Basket for woollens:**  
Dry individual woollen items, sports shoes and soft toys in the basket for woollens.  
Order number: **WMZ20600**.
- **Connecting kit for the condensation drain:**  
Use a hose to draw off the condensation immediately.  
Order number: **WTZ1110**.

## Transport and frost protection

### To empty the condensate container:


1. Use the program selector to select any program.
2. Press the Start button.
3. Wait for 5 minutes.  
**Note:** The condensation is drained.
4. Empty the condensate container again.
5. Switch off the dryer.

**Caution!**  
**Any residual water may leak out and cause material damage.**


Transport the dryer in an upright position.

\* Depending on the model


## The main points in brief

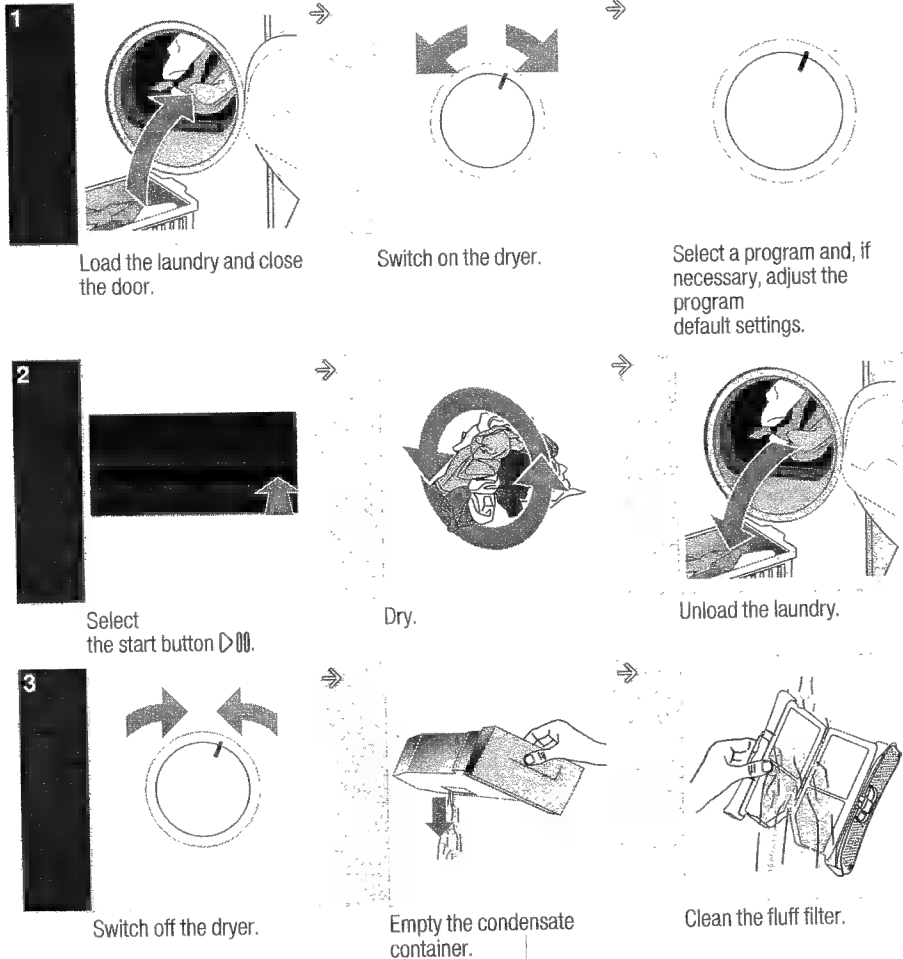

9. First insert the heat exchanger, and then fit the heat exchanger's top cap in place.
10. Turn both locking levers back and close the maintenance flap until it locks into place.

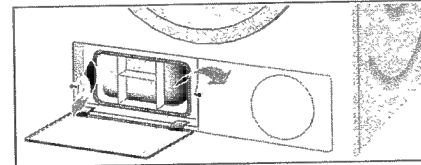


11. Close the maintenance flap and press on it until you feel it click in place.

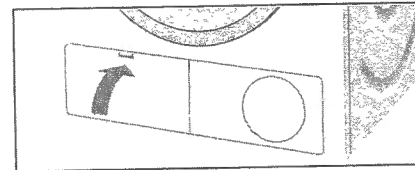

## Cleaning the moisture sensor

**Note:** The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is. After long periods of usage the moisture sensor may become covered by a fine layer of limescale or residues of detergents and care products. Such residues must be removed regularly as the sensor function and in consequence the drying result may be impaired.

Open the door and clean the moisture sensor with a coarse sponge.

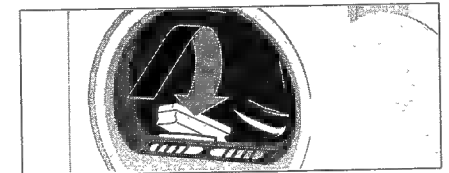

**Caution!**  
Moisture sensor may be damaged. Do not clean moisture sensors with abrasives and steel wool.

## Cleaning

### Cleaning the dryer and the control panel

#### Warning Risk of death!

There is a risk of electric shock as the dryer is operated with electricity. Disconnect the dryer from the mains before cleaning.

Clean the dryer using only water and a soft, damp cloth.

Remove all detergent residue, spray residue or other residues immediately. Do not use cleaning agents or agents for pre-treating laundry (e.g. prewash sprays, stain removers). Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

### Cleaning the heat exchanger


#### Notes

- The heat exchanger requires cleaning once a month, however this varies depending on how frequently the dryer is used.
- If there is debris in the heat exchanger, this will increase the amount of time required for drying and will compromise the drying results.


1. Allow the dryer to cool down and place an absorbent cloth beneath the maintenance flap.

**Note:** Residual water may leak out.


2. Open the maintenance flap fully.

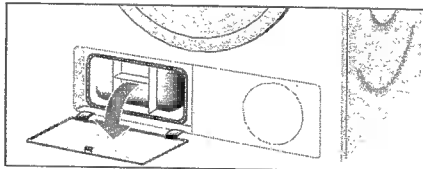


3. Turn both locking levers towards each other.

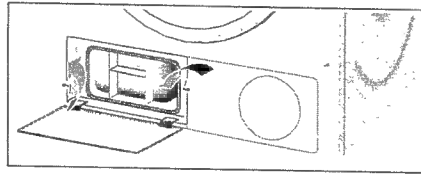


4. Remove the top cap from the heat exchanger.

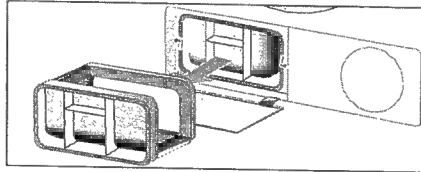

5. Remove the heat exchanger.

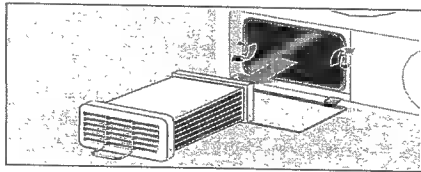

6. Flush water through the heat exchanger from all sides to completely remove all fluff.

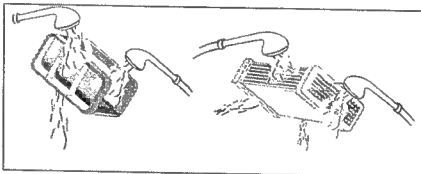

#### Caution!


#### There is a risk of damage to the heat exchanger.








Only use water to clean the heat exchanger, and do not use any hard objects or objects with sharp edges to remove the fluff.

7. Remove all fluff from the seals on the dryer and on the heat exchanger.
8. Allow all the water to drip off.


## Getting to know your appliance
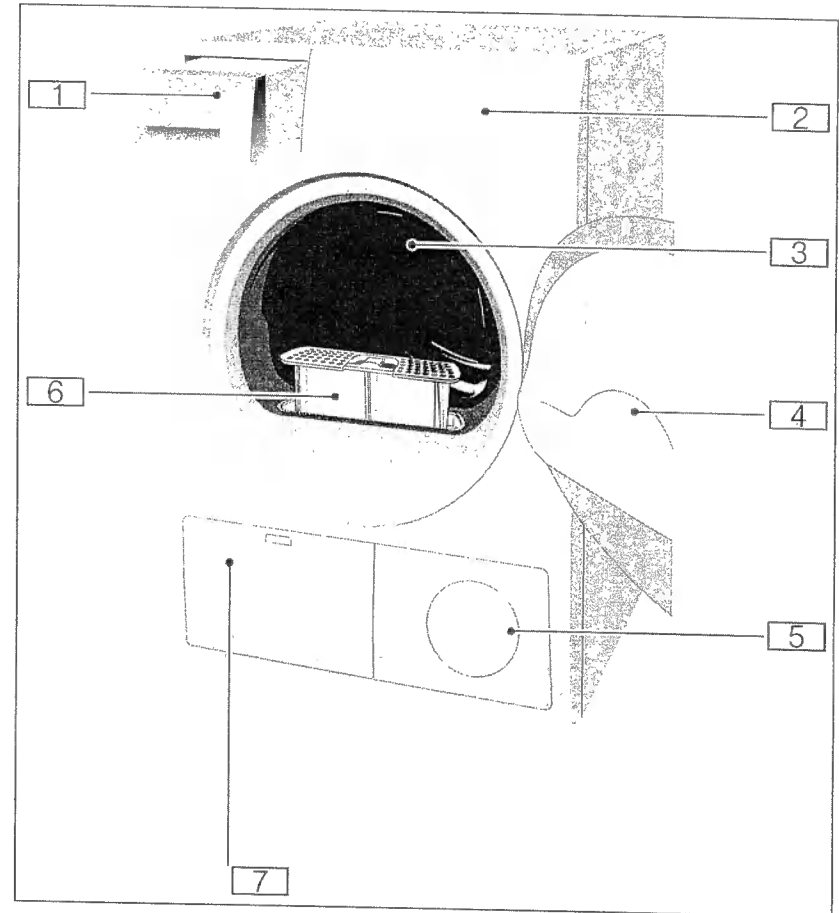
### Dryer

     


- |   |  |
|---|--|
|  | Condensate container                         |
|  | Control and display panel                    |
|  | Drum interior light (depending on the model) |
|  | Dryer door                                   |
|  | Air inlet                                    |
|  | Fluff filter                                 |
|  | Heat exchanger                               |

## Control panel

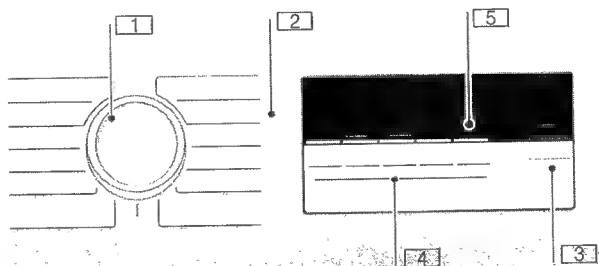


- 1 Use the **program selector** to switch the dryer on and off and to select the program.
- 2 **Programm** → Page 20.
- 3 **Start button** for starting or interrupting the program → Page 22.
- 4 **Buttons** → Page 22.
- 5 **Display panel with buttons** → Page 18.

 **Signal setting**

You can change the following settings:

- The spin speed that is used for spinning your laundry before it is dried,
- The volume of the audible signal at the end of the program,
- The volume of the audible button signals.

You will need to activate the setting mode in order to change these settings.

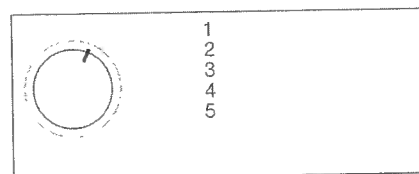**Activating setting mode**

1. Switch the dryer on.
2. Select the "Cottons" programme in position 1 and wait for five seconds. The symbols go out in the display panel and the programme duration is displayed.
1. Press and hold the Start button and, at the same time, turn the programme selector clockwise to position 2.
2. The **spin speed** is shown in the display.
3. Press the "Finish in" time button or the drying time button to change the spin speed.
4. Turn the program selector clockwise to position 3.

5. The volume of the **audible signal at the end of the program** is shown in the display.



0 = off, 1 = quiet, 2 = medium, 3 = loud, 4 = very loud

6. Press the "Finish in" time button or the drying time button to change the volume.
7. Turn the program selector clockwise to position 4.
8. The volume for the **audible button signal** is shown in the display.




0 = off, 1 = quiet, 2 = medium, 3 = loud, 4 = very loud

9. Press the "Finish in" time button or the drying time button to change the volume.

**Exiting setting mode**

Turn the program selector to the "Off" position once you have set the required spin speed and the volume. The settings have now been saved.

- Dry the fluff filter, close it and reinsert the fluff filter.

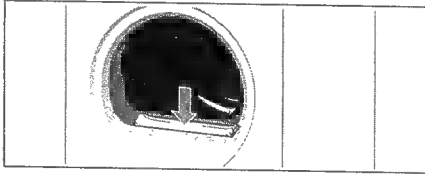


**Caution!**  
The dryer may be damaged.

Do not operate the dryer without a fluff filter or if the fluff filter is defective.


### Emptying the condensate container

**Note:** After each drying cycle, empty the condensate container; otherwise the next drying programme may be cancelled as a result of the condensate container being full.

- Pull out the condensate container horizontally.

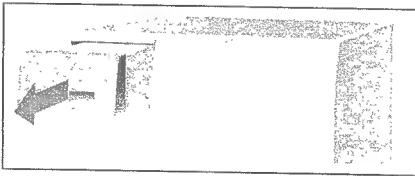


- Pour out the condensation water.

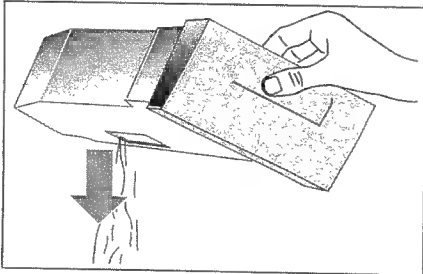

**Caution!**  
**Dirty condensation water may be harmful to your health and cause material damage.**


Condensation water is not suitable for drinking and may be contaminated with fluff. Do not drink the condensation water or reuse it.

- Push in the condensate container until you feel it lock back into place in the dryer.

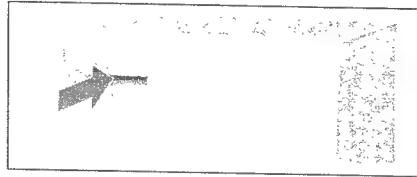

### Display panel


#### Buttons in the display panel

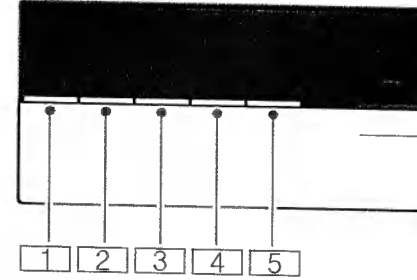

- 1 Select the **degree of dryness**.
- 2 Select the **drying time**.
- 3 Select the **Ready in time**.
- 4 Select **Anti-Crease**.
- 5 Select **Low-Heat Drying**.

For a detailed description of all buttons, see → Page 22 onwards.

### Display panel

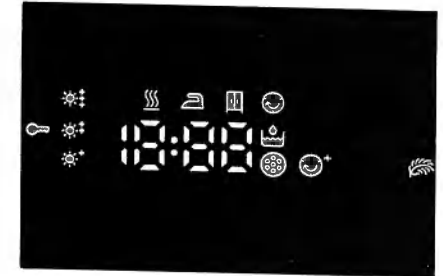

- \* Fine adjustment of the dryness level.
- + Anti-crease selected.
- 🔒 Childproof lock selected.
- 👉 Low-Heat Drying selected.
- ⏸ Start or Pause selected.
- 3 h Program delay in hours when "Ready in" time is selected.
- 1:27 Expected program duration in hours and minutes.
- 🔌 📄 🗄 End-P- Program progress: Wet; Iron Dry; Cupboard Dry; Anti-Crease; End and Pause.
- 🚰 Empty the condensate container; → Page 25.
- 🌀 Clean the fluff filters; → Page 24.

## Laundry

### Preparing the laundry

#### Warning

#### Risk of explosion or fire!

Remove any cigarette lighters and matches from pockets.

#### Caution!

#### The dryer drum and fabrics may be damaged.

Remove all objects from pockets and observe the following information:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks and eyelets and buttons. Button up large items of laundry, such as covers.
- Remove any metal objects, such as paper clips, from pockets.
- To ensure a consistent drying result, sort laundry by fabric type and drying programme.
- Always dry very small items of laundry, e.g. babies' socks, together with large items such as towels.
- Knitted fabrics such as T-shirts and jerseys often shrink the first time they are tumble-dried. Use a gentle programme.
- Do not overdry easy-care laundry. This increases creasing of the laundry.
- Use timed programmes for single garments.

- Some detergents and care products, e.g. starch or softeners, contain particles which may be deposited on the moisture sensor. This may impair the sensor function and in consequence the drying result.

#### Notes

- When washing laundry to be tumble-dried, use the correct amount of detergent and care products as specified in the manufacturer's instructions.
- Clean the moisture sensor regularly → Page 28.

### Sorting laundry according to:

- Suitable for tumble drying
- Dry at normal temperature
- Dry at low temperature
- Do not tumble-dry

**Note:** Do not load laundry from the washing machine directly into the tumble dryer. Sort the spun laundry before placing it in the dryer drum.

If you dry thin, thick and multi-layer fabrics together, they will dry to differing degrees. To achieve an even drying result, you should therefore only dry together laundry of the same type of fabric and structure. If you feel that the laundry is still too damp, you can select a timed programme for subsequent drying → Page 20.

#### Caution!

#### Possibility of material damage to the dryer or laundry.

#### Do not tumble-dry the following fabrics:

- Laundry contaminated with oil.
- Unwashed fabrics.
- Non-breathable fabrics (e.g. rubber-coated).
- Easily damaged fabrics such as silk, synthetic curtains.

### Changing the program or adding laundry

You can remove or add laundry and change or alter the program at any time during drying.

1. To pause the program, open the dryer door or press the Start button.
2. Add or remove laundry.
3. Select another program or an additional function, if required.
4. Close the dryer door.
5. Press the Start button.

**Note:** The program duration in the display panel is updated depending on the load and residual moisture in the laundry. The values displayed may change after the program is changed or the load is adapted.

### Program interruption

The program can be interrupted at any time; to pause, open the dryer door or press the Start button.

#### Caution!

#### Risk of fire. Laundry may catch fire.


If you cancel the program, you must remove the laundry items and spread them out so that the heat can disperse.

### Program end

*End* appears in the display panel.

### Removing laundry and switching off the dryer

1. Remove the laundry.
2. Turn the program selector to the "off" position.

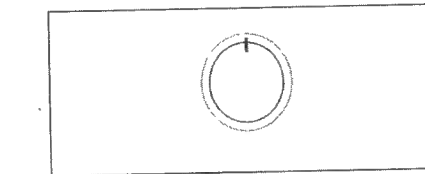


### Clean the fluff filter


**Note:** During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.

Clean the fluff filter **after each** drying cycle:

1. Open the dryer door and remove all fluff from the door.
2. Remove the fluff filter.

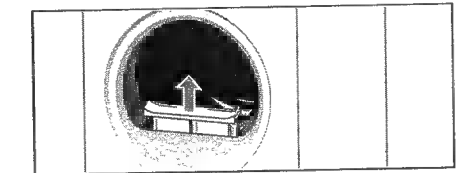


3. Remove the fluff from the recess in the fluff filter.

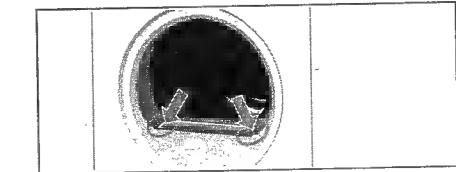

**Note:** Ensure that no fluff falls into the open shaft.

4. Open the fluff filter and remove all the fluff.
5. Rinse away the fluff under running water or clean the fluff filter in the dishwasher.

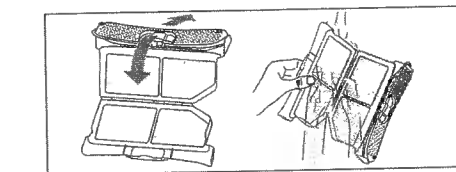



## Operating the appliance

### Loading laundry and switching on the dryer

**Note:** The dryer must be correctly positioned and connected, → Page 13.

1. Place the laundry in the drum.
2. To switch the dryer on, turn the program selector to any program.
3. Close the dryer door.

#### Caution!


#### Risk of material damage to the dryer or laundry.

Take care not to trap any laundry in the door.

### Setting a program

**Note:** If you have activated the childproof lock, you must deactivate it before you can set a program, see → Page 22.

1. Select the required program; detailed information on the programs can be found from → Page 20 onwards.
2. Use the program selector to set the required program. The default program settings for the selected program appear in the display panel.

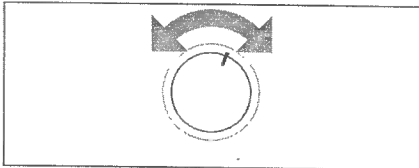

**Note:** Default program settings are standard settings that are already defined when a program is selected. After selecting a program, you can see the default program settings in the display panel.

3. If required, adjust the default program settings. You can find detailed information on this from → Page 20 onwards.

### Starting the program

Press the Start button.





 

**Note:** If you want to lock the program to prevent it from being inadvertently adjusted, you can select the childproof lock, see → Page 22.

### Program sequence

The programme status is indicated in the display field.

e.g. 1:27 Expected programme duration in hours and minutes.

**Note:** When a programme is selected, the expected drying time for the recommended load is displayed. During drying moisture sensors detect the remaining moisture in the load and adjust the programme length (except timed programmes). This is visible via the time remaining leaping forward.

 Wet  
 Iron Dry  
 Cupboard Dry  
 AntiCrease  
 -P- Pause  
 End

## Programs and buttons

### Programs

Program and fabrics	Maximum load and program settings/info
Name of the program Which fabrics is the program suitable for?	The maximum load is based on the dry weight of the fabrics Possible program settings
<b>Cottons</b> Cupboard Dry Plus Hard-wearing, heat-resistant fabrics that are made of more than one layer of cotton or linen and do not dry readily.	8 kg
<b>Cottons</b> Cupboard Dry Normal, hard-wearing and heat-resistant fabrics made of a single layer of cotton or linen.	8 kg
<b>Cottons</b> Iron Dry Normal, hard-wearing and heat-resistant fabrics made of a single layer of cotton or linen that need to be damp after drying and are suitable for ironing or hanging up.	8 kg
<b>Easy-Care</b> Cupboard Dry Plus Synthetic or blended fabrics that are made of more than one layer and do not dry readily.	3.5 kg
<b>Easy-Care</b> Cupboard Dry Normal synthetic or blended fabrics made of a single layer.	3.5 kg
<b>Easy-Care</b> Iron Dry Normal synthetic or blended fabrics made of a single layer that need to be damp after drying and are suitable for ironing or hanging up.	3.5 kg
<b>Sportswear</b> Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	1.5 kg
<b>Allergy+</b> Hard-wearing towels made of cotton.	6 kg
<b>Mixed Load</b> Mixed load consisting of cotton and synthetic fabrics.	3 kg

**Timed Programme warm**

All types of fabric; time programme.

Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry.

**Notes**

- Only dry wool, sports shoes and soft toys with the basket for woollens → Page 14.
- In the time programme, the laundry's residual moisture is not automatically detected. If the laundry is still too damp after the drying programme, repeat the programme and, if required, extend the programme length.

**Timed Programme cold**

All types of fabric. For freshening up or airing items of laundry that have not been worn for long.

**Shirts 15**

For optimum drying results, dry a maximum of 5 shirts at one time. After drying, iron the laundry or hang it up and leave for a period of time. Residual moisture is then distributed evenly.

**Super Quick 40**

Synthetics and light cottons.

**Wool Finish**

Machine washable fabrics made of wool or containing wool.

**Notes**

- Fabrics become fluffier but not dry.
- Remove fabrics once the programme has ended and allow to dry.

**Delicates**

For delicate, washable textiles, e.g. made of satin, synthetic fibres or blended fabrics.

**3 kg**

You can adjust the programme length using the button for the drying time.

**3 kg**

You can adjust the programme length using the button for the drying time.

**1 kg**

**2 kg**

**3 kg**

**2 kg**

**Buttons**

Buttons	Explanations and notes
<b>Note:</b>	Not all buttons and their functions can be selected in all programs.
<b>Fine adjust</b>	If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard Dry. The dryness level can be increased with the degree of dryness in three stages, from * to *†. If you have adjusted the dryness level, the setting for all programmes with a selectable dryness level is retained even after the dryer is switched off. <b>Note:</b> The higher the degree of dryness, the longer the programme duration.
<b>Time Dry</b>	Adjust the programme length for the time programmes. Between 20 minutes and 3 hours, in 10-minute increments.
<b>Finished in</b>	The programme will end in 1-24 hrs. Set the "Ready in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed in the display panel.
<b>☞ 3 sec. (Childproof lock)</b>	Press and hold the "Ready in" time button and the drying time button at the same time for 3 seconds to activate or deactivate the childproof lock.
<b>Crease Guard</b>	The drum moves the laundry at regular intervals for 60 minutes after drying, in any program, to prevent creasing. Automatic anti-crease function can be extended by up to 180 min.
<b>Low Heat</b>	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane. Selecting the button will extend the drying time.
<b>Start/Pause</b>	Starts or pauses the programme.