

**FRIGIDARE
WASHING
MACHINE**

Model: FLCF06GFCWT

FULL ELECTRONIC

USER MANUAL

SECTION 1: BEFORE USING













SAFETY WARNINGS




- Do not use a multiple socket or extension cord.
- Do not insert a plug with damaged or broken cord into the socket.
- If the cord is damaged it should be replaced by the manufacturer or appointed service agent in order to avoid a hazard.
- Never remove the plug from the socket by pulling from the cord section. Remove the plug by holding.
- Do not plug the power supply with wet hands.
- Never touch the machine with wet hands or feet.
- Never open the detergent drawer while the device is running.
- Never force to open the door of the machine while the machine is running.
- Since the machine can reach high temperatures while running, do not touch the drain hose and water during draining.
- In case of any failure, first unplug the device and close the water tap. Do not attempt to repair. Please apply to the nearest authorized service station.
- Do not forget that the packing material of your machine may be hazardous for children.
- Do not let your children play with the washing machine.
- Keep your pet away from your machine.
- Your machine should only be used by adults within the information written in this manual.
- Your machine is designed for use in house environment. Warranty will be invalid if you use it for commercial purposes.
- The appliance should not be put on a carpet which can block the air ventilation on the bottom side.

RECOMMENDATIONS

- The detergent or softener in contact with air for a long time will dry and stick to your detergent drawer. To avoid this put your detergent and softener into the detergent drawer just before washing.
- It is recommended that you use pre-washing program for only very dirty clothes.
- Please do not exceed the maximum loading capacity.
- The appliance is not intended for use by people (including children) with reduced physical, sensor or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they don't play with the appliance.

SECTION 10: INTERNATIONAL WASHING SIGNS

			
Washing temperature.	Do not wash (hand wash)	Lukewarm iron.	Medium hot iron.
			
Hot iron.	Do not iron.	Do not tumble dry.	Hang to dry.
			
Drip dry.	Dry flat.	Do not bleach.	Handy to bleach.

		
All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent to be used. Garments bearing these symbols should not be washed in your machine unless the label says otherwise.		


FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 05	The star/pause light and program end light blink.	The heater of your machine or the heat sensor has failed.	Shut down your machine and unplug. Turn off your tap and apply to the nearest authorized service.
Err 06	The program ready light and program end light blink.	The motor has failed.	Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.
Err 07	The program star/pause light, ready light and program end light stays on permanently.	Configuration error.	Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.
Err 08	The star/pause light, program ready light and program end light blink.	The motor has failed.	Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.
Err 09	The program ready light and program end light stays on permanently.	The network voltage is too high or too low.	If the network voltage is lower than 150V or higher than 260V, your machine will automatically stop. When the network voltage is recovered, your machine will continue its operation.

SECTION 3: TECHNICAL SPECIFICATIONS

	32 LT	40 LT	42 LT	47 LT	49 LT	55 LT
Maximum dry laundry capacity (kg)	4	5	5	6	7	7
Recommended loading (kg)	3,5	4,5	4,5	5,5	6,5	7,5
Height (cm)	85	85	85	85	85	85
Width (cm)	59,6	59,6	59,6	59,6	59,6	59,6
Depth (cm)	37	42	51	54	54	57
Maximum spin cycle (rpm)	600/800/1000/1200	600/800/1000/1200	600/800/1000/1200/1400/1600	600/800/1000/1200/1400/1600	600/800/1000/1200/1400/1600	600/800/1000/1200/1400/1600

(*Maximum spin cycle depends on the model.

SECTION 4: CONTROL PANEL

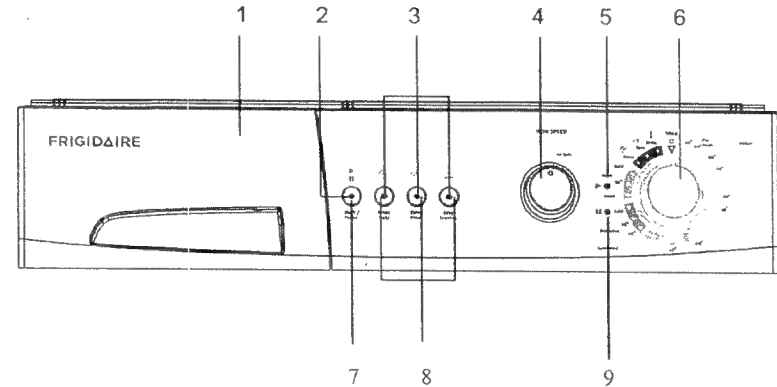

- 1-Detergent drawer
- 2-Start/pause light
- 3-Function indicator lights
- 4-Spin speed selector
- 5-Program ready light
- 6-Program knob
- 7-Start/pause button
- 8-Function buttons
- 9-Program end light

START/PAUSE BUTTON



Used to start a selected program or pause during running.



WARNING!

It is required for the program knob to be brought to O(off) position before selecting the program or changing a continuing program.

FUNCTION INDICATOR LIGHTS



When the start/pause button or any function button is pressed, the corresponding light turns on. The light turns off when the function button or start/pause button is re-pressed, or when the process the selected function is completed.

The function indicator lights are also used in failure detection system mentioned in section 9.

FUNCTION BUTTONS

Rinse hold



This function is recommended to be used when the clothes cannot be taken immediately after the end of the program. This will prevent occurrence of wrinkles. When this button is pressed, the last rinsing water is not drained. For the program to continue from the same point, repress the same button.

If you do not want your sensitive clothes to be spun or you want them to be spun sensitively, turn the program knob to O (off) position. Bring the program knob on one of the draining or spinning programs you desire and press the start/pause button. If the program you have selected is a drain program, your machine will draining the water inside. If you have selected a spinning program, your machine will perform a spinning operation and then end the program.



Easy ironing

By using this function, you can ensure your clothes to come out less wrinkled after the washing.



Soak

Using this function will ensure better cleaning by leaving your clothes in water with detergent for a certain period of time before your machine takes in the initial water and starts washing. This function is recommended to be used for very dirty clothes.



Extra rinse

You can have one more rinsing done in addition to the rinses which your machine has made in all washing programs by using this function.

FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 02	The program ready light blinks.	The water level in your machine is below heater. The pressure of your water supply may be low or locking.	Turn on the tap to the end. Water may be cut, check it. If the problem is still continuing, your machine will automatically stop after a while. Unplug your machine, turn off the tap and apply to the nearest authorized service.
Err 03	The start/pause light and program ready light blinks.	The pump has failed or the pump filter is obstructed.	Clean the pump filter. If the problem persists, apply to the nearest authorized service. (*)


(.) See the section regarding the maintenance and cleaning of your machine.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
The spinning process is not done or starts with delay.	No failure. The unbalanced load control may work in that way	The unbalanced load control system will try to distribute your clothes in a homogenous manner. After your clothes are distributed, passage to spinning process will be realized. In the next washing process, place your clothes into the machine in a wellbalanced manner.

SECTION 9: AUTOMATIC FAILURE DETECTION SYSTEM

Your machine is equipped with systems which will both take the necessary precautions and warn you in case of any failure by controlling itself constantly during the washing processes.

FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 01	The start/pause light blinks.	The door is not shut properly.	Shut the door properly so that you hear the click. If the problem persists, turn off the machine unplug and apply to the nearest authorized service immediately.

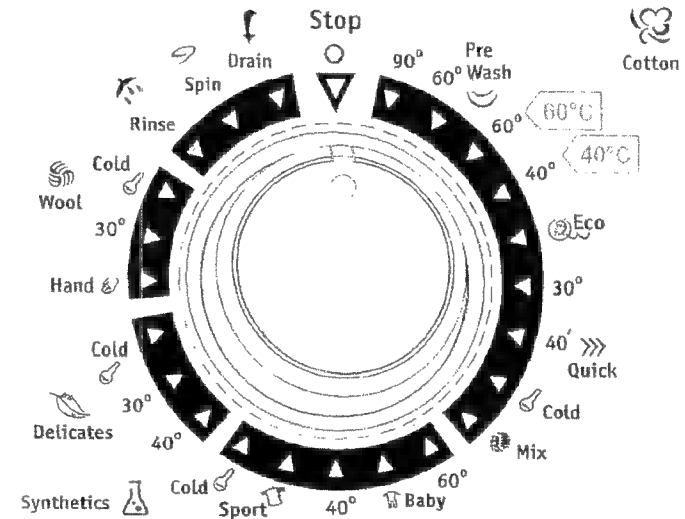

SECTION 5: WASHING YOUR LAUNDRY

- Plug the machine.
- Open the tap water.

First wash cycle

There may be water left inside your machine after factory tests and trials. It is recommended that the first wash cycle should be made without any laundry so that carry out this water; pour half a measuring cup of normal all purpose detergent into compartment 2 and select cotton program at 90°C.

BEFORE WASHING

Discrimination of your laundry

- Discriminate your clothes according to their types (cotton, synthetic, sensitive, woolen, etc.), washing temperatures and level of dirtiness.
- Never wash your white and coloured clothes together.
- Since your new coloured clothes may shed dye on the first wash, wash them separately.
- Be careful that no metal pieces are found on or in the pockets of your clothes, remove if there is any.
- Zip and button your clothes.
- Remove the plastic or metal hooks of the curtains and laces or place them inside a washing bag and tie.
- Pull the textiles like trousers, knitted fabric, t-shirt and sweat shirt inside out.

- Wash your small clothes like socks and handkerchiefs in a washing bag.



Wash up to 90°C



Wash up to 60°C



Wash up to 30°C



Not washable in washing machine

Placement of the clothes into the machine

- Open the door of your machine.
- Fill your clothes in your machine in a well-spread manner.
- Place each cloth separately. When you shut the door of your machine, be careful that no cloth is jammed between the cover and the gasket.
- Shut the door of your machine tightly otherwise your machine will not start the washing process.

Filling detergent in the machine

- The quantity of the detergent that you will fill in your machine depends on the following criteria:
- Your detergent consumption will change according to the dirtiness level of your clothes. For your slightly dirty clothes, do not pre-wash and put a small amount of detergent in the compartment no.2 of the detergent drawer.
- For your excessively dirty clothes, select a program with pre-washing, fill $\frac{1}{4}$ portion of the detergent you will put in compartment 1 in the detergent drawer and the remaining portion in compartment 2.
- In your machine, use the detergents developed especially for automatic washing machines. The quantities that will be used for your clothes are written on the packing of the detergents.
- As the hardness of your water increases, the amount of the detergent to be consumed will also increase.
- As the amount of your clothes increases, the amount of the detergent to be consumed will also increase.
- Fill your softener in the softener compartment in your detergent drawer. Do not exceed the MAX level. Otherwise, the softener will diffuse in the washing water via the siphon.
- The softeners with high density should be diluted with some water before filling in the drawer. That is because the softener with high density obstructs the siphon and prevents the flow of the softener.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
The washing result is not good.	Clothes exceeding the maximum capacity has been filled in your machine.	Put the clothes in your machine in a manner not to exceed its maximum capacity.
	Your water may be hard.	Use the amount of detergent according to the declaration of the detergent producer.
	Distribution of the clothes in your machine is not well balanced.	Spread the clothes inside the machine in an orderly and well balanced manner.
The water is drained from the machine as soon as it is filled.	The end of the water drain hose is in a position too low according to the machine.	Place the water drain hose in an appropriate height.(--)
No water is seen in the drum during washing.	No failure. The water is at the lower part of the drum.	
There are residues of detergent on the clothes.	The pieces of some detergents which do not dissolve in water may stick to your clothes as white stains.	By calibrating your machine for "Rinsing" program, make an additional rinsing or eliminate the stains After drying with the help of a brush.
There are gray stains on the clothes.	These stains may be caused by oil, cream or ointment.	In the next washing operation, use the maximum detergent amount declared by the detergent producer.
(**) See the section concerning installations your machine.		

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
Your machine is vibrating.	There is a small amount of clothes in the device.	It does not prevent operation of the machine.
	Excessive amount of clothes are filled in the machine or the clothes are not placed in a well-balanced manner.	Do not exceed the recommended quantity of clothes and spread your clothes in the machine in a well balanced manner.
	Your machine touches a rigid object.	Prevent your machine's leaning on a tough place.
Excessive foam in the detergent drawer.	Too much detergent has been used.	Press the start/pause button. In order to stop the foam, dilute one table-spoon of softener in half liter of water and pour it in the detergent drawer. Press the start/pause button after 5-10 minutes. Arrange the amount of the detergent properly in the next washing process.
	Wrong detergent has been used.	Use only the detergents produced for full automatic machines.
The washing result is bad.	Your laundry too dirty for the program you have selected.	Select a suitable program. (see Table-1)
	The amount of detergent used is not sufficient.	Use more detergent according to the detergent.

- You can use fluid detergents in all programs without pre-washing. For this, mount the fluid detergent level plate in the second compartment of the detergent drawer and arrange the amount of fluid detergent according to the levels on this plate.

RUNNING THE MACHINE

Program selection and features

Select the program and additional functions appropriate for your clothes from Table-1.

Start/Pause

By pressing this button, you can start the program you have selected or pause a running program.

Starting the program

- Adjust the program knob to a program you desire.
- The program ready light will be on.
- If you want, you can select one or more additional functions.
- Run the program which you have selected by pressing the Start/Pause button.

Changing the program

If you have selected a program and you do not want it to continue:

- Press the start/pause button.
- Bring the program knob to O(off) status.
- Adjust the program knob to the program you desire. (You can select the program that you desire from Table-1).
- The program ready light will be on.
- By pressing the start/pause button, run the program which you have selected.

Cancellation of the Program

If you desire to end a running program early:

- Press the start/pause button.
- Turn the program knob to O(off) status.
- Turn the program knob to "Draining" or "Spinning" programs.
- The program ready light will be on.
- Run the program you have selected by pressing the start/pause button.

Program ending

- Your machine will automatically stop when the program you have selected ends.
- The program end light will be on.
- Turn the program knob to O(off) position.

- The door will be unlocked in approximately two minutes after the program ends. You can open the door by pulling the handle of the door towards yourself and take out your clothes.
- After you unload your clothes leave the door open to dry the interior of your machine.
- Unplug your machine.
- Close the water tap.

WARNING!

If the power is off end on again after a while on any stage of the washing program, your machine will continue the program from the point where it was interrupted. This is not harmful for your machine.

Child lock

Child lock is used in order to protect the washing cycle from the effects of unwanted button activations during the cycle. Child lock is activated by pressing the first and third button on the control panel at the same for more than 3 sec. When child lock is activated, LEDs on the function buttons blink to indicate that child lock is active. In order to deactivate child lock, the same buttons (1st and 3rd) should be pressed again for more than 3 seconds. Deactivation of child lock is shown by blinking of LED on Start/Pause button.

WARNING!

Your machine will inactivate the spin speed selector (valid for A3 models) and function buttons when the child lock is activated.

SECTION 6: MAINTENANCE AND CLEANING

- Unplug your machine.
- Close the water tap.

WATER INLET FILTERS


On the tap part of your machine's water inlet hose and at the ends of water inlet valves, there are filters to prevent entrance of the dirt and foreign materials in the water to the machine. If the machine is unable to receive sufficient water although your water tap is opened, these filters should be cleaned.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
Your machine does not operate	It is unplugged.	Insert the plug into the socket.
	Your fuse is defected.	Change your fuse.
	The electric power is off	Check the electric power
	Start/pause button has not been pressed.	Press the start/pause button
	The program knob is in O(off) status.	Bring the program knob on the desired status.
Your machine does not receive water.	The door is not shut properly.	Shut the door properly. You should hear the click.
	Water tap is closed.	Open water tap.
	The water inlet hose may be bent.	Check the water inlet hose.
	The water inlet hose is obstructed.	Clean the filters of water inlet hose. (*)
	The valve inlet filter is obstructed.	Clean the valve inlet filters. (")
Your machine is not draining water.	The door is not shut properly.	Shut the door properly. You should hear the click.
	The drain hose is obstructed or bent.	Check the drain hose.
	The pump filter is obstructed.	Clean the pump filter (*)
Your machine is vibrating.	The clothes are not placed inside the machine in a well balanced manner.	Spread the clothes inside the machine in an orderly and wellbalanced manner.
	The feet of your machine are not adjusted.	Adjust the feet. (**)
	Transportation screws are not removed.	Remove transportation screws. (**)
(-)See the section concerning the maintenance and cleaning of your machine.		
(**)See the section concerning installations your machine.		

⚠ WARNING!

Danger of being scalded!

Since the water inside the pump maybe hot, wait for it to cool.

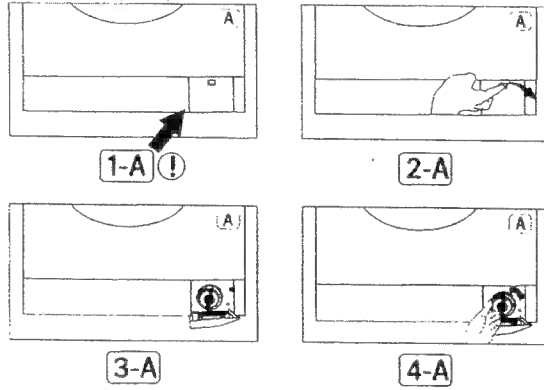

DETERGENT DRAWER

Detergents may form a sediment in your detergent drawer or in housing of the detergent drawer in time. To clean the sediment, pull out the detergent drawer from time to time. To pull out the detergent drawer:

- Pull the detergent drawer to the end.(DIAGMM-1)
- Siphon plug to tread of the drawer, continue to pull until the drawer is pull out.(DIAGRAM-2)
- Wash with an old toothbrush and excessive amount of water.
- Take off the leftover detergent avoid to drop into your machine.
- After drying the detergent drawer put into the housing in the same manner you pull out.

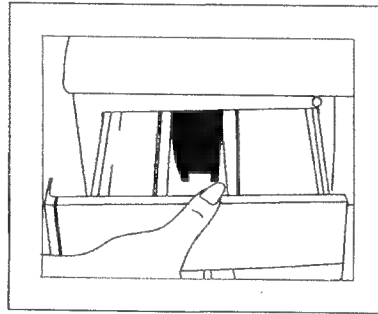


DIAGRAM-1

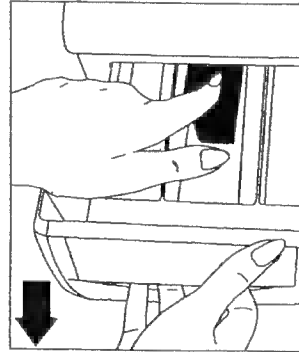


DIAGRAM-2

PROGRAM	DETERGENT COMPART.	MAX DRY LOAD CAPACITY (kg)						TYPE OF LAUNDRY	EXPLANATIONS
		32 LT	40 LT	42 LT	47 LT	48 LT	55 LT		
COTTON 90°	2	4	5	5	6	7	8	Dirty, boil, cotton and linen textile	Underweares, sheet, table cloth, t-shirt, shirt, towel (max.dry load capacity 1/2) kg
COTTON 60° (PREWASH)	1+2	4	5	5	6	7	8	Very dirty, cotton, coloured and linen textile	
COTTON 40°	2	4	5	5	6	7	8	Dirty, cotton, coloured and linen textile	
COTTON 30°	2	4	5	5	6	7	8	Dirty, cotton, coloured and linen textile	
ECO WASH	2	4	5	5	6	7	8	Dirty, cotton, coloured and linen textile	
COTTON 30°	2	4	5	5	6	7	8	Slightly dirty, cotton, coloured and linen textile	
QUICK WASH	2	2	2.5	2.5	3	3.5	4	Slightly dirty, cotton, coloured and linen textile	
COTTON COLD	2	4	5	5	6	7	8	Slightly dirty cotton, coloured and linen textile. Washed without heating the tap water.	
MIX WASH	2	4	5	5	6	7	8	Dirty or very dirty, stain, cotton, coloured and linen textile	
SYNTHETIC 60°	2	2	3	3	3	3.5	3.5	Dirty, synthetic or synthetic mixture textile	
BABY WASH	2	2	3	3	3	3.5	3.5	Baby laundry	
SYNTHETIC 40°	2	2	3	3	3	3.5	3.6	Slightly dirty, synthetic or synthetic mixture textile	

TABLE-1


PROGRAM	DETERGENT COMPART.	MAX DRY LOAD CAPACITY (kg)						TYPE OF LAUNDRY	EXPLANATIONS
		32 LT	40 LT	42 LT	47 LT	49 LT	55 LT		
SPORT CLOTHES	2	2	3	3	3	3.5	3.5	Sport clothes	All sport clothes and jeans
SYNTHETIC COLD	2	2	3	3	3	3.5	3.5	Slightly dirty, synthetic or synthetic mixture sensitive laundry. Washed without heating the tap water.	Nylon socks, bicouise
CURTAIN WASH	1+2	1	2	2	2	2	2.5	Tulle and curtain as sensitive laundry	Tulle, curtain, diolen, dralon
DELICATE 30°	2	1	2	2	2	2	2.5	Slightly dirty, cotton, coloured, synthetic or synthetic mixture sensitive laundry	Silk mixture, shirt, bicouise, polyester, polyamid, mixture textile
DELICATE COLD	2	1	2	2	2	2	2.5	Very slightly dirty, cold water with to wash cotton, coloured, synthetic or synthetic mixture sensitive laundry	Hand wash to all laundry
HAND WASH	2	1	2	2	2	2	2.5	Slightly dirty, wash in hand cotton, coloured, synthetic or synthetic mixture laundry	Hand wash to all laundry
WOOL 30°	2	1	2	2	2	2	2.5	Dirty, hand and machine to wash wool laundry	All wool laundry
WOOL COLD	2	1	2	2	2	2	2.5	Very slightly dirty, cold water, hand and machine to wash wool laundry	All wool laundry
RINSING	When you need an additional rinsing to be done to your clothes after the washing process, you can use this program for all kinds of clothes.								
SPINNING	When you need an additional spinning to be done to your clothes after the washing process, you can use this program for all kinds of clothes.								
DRAINING	This program is used to drain the dirty water inside after the washing process of your machine. If you want the water inside your machine to be drained before the program ends, you can use this program.								

TABLE-1 CONTINUE

(*) You can use softeners in all programs (except spinning and draining programs) optionally. When you arrange the quantity of the softener, comply with the warning of the softener producer. Fill your softener in its (softener) compartment of the detergent drawer.

Program duration, energy consumption and water consumption values may vary according to wash load weight and type, selected extra functions, tap water and ambient temperature.

- Remove the water inlet hose.
- Remove the filters found on the water inlet valves by using a pincer and wash thoroughly with a brush.
- Clean the filters of the water inlet hoses located on the tap side by removing manually together with the seal.
- After you clean the filters, you can fit them the same way as you have removed.

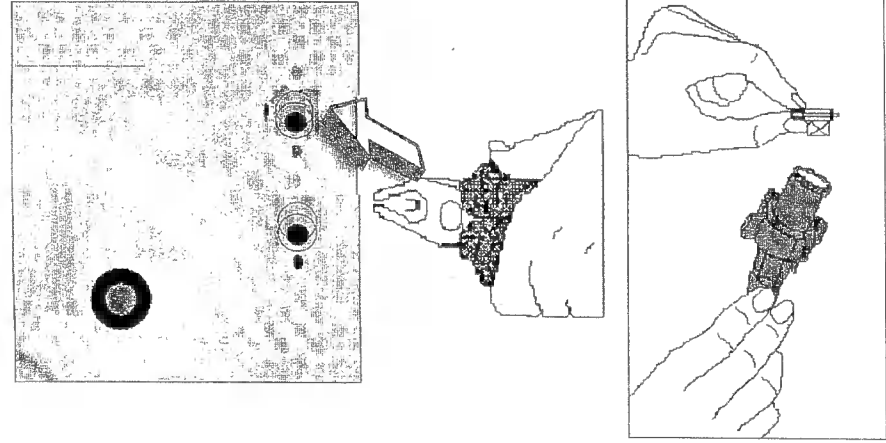

PUMP FILTER

The pump filter system elongates the life of your pump, which is used to drain the dirty water. It prevents lint to enter the pump. Cleaning of your pump filter in every 2-3 months is recommended. To clean your pump filter:

- Open the kickplate's cover, by pulling the handle.
- Before opening the filter cover, place a cup in front of the filter cover to prevent flow of the remaining water in the machine.
- Loosen the filter cover by rotating it counter clockwise and drain the water.
- Remove the foreign materials from the filter.
- Check for the rotation of the pump manually.
- After you have cleaned the pump, fit the filter cover by rotating clockwise.
- Put the kickplate cover into the place.
- Do not forget that if you do not fit in the filter cover properly, it will leak water.