

Safety instructions



Emergency

Use dryer

ONLY ...

NEVER ...

- Immediately pull out mains plug or interrupt fuse.
- in the house.
- for drying textiles.

Hazards


- use dryer for other purposes than those described above.
- modify the technology or properties of the dryer.
- Children and uninstructed persons must not use the dryer.
- Do not leave children unattended near the dryer.
- Keep pets away from the dryer.
- Take all objects out of the pockets. Look out for cigarette lighters
-> risk of explosion!
- Do not lean or sit on the door -> risk of dryer tipping over!
- Open the door carefully. Hot steam may escape.

Installation

- Frost damage possible below 0 °C.
- Attach loose cables or hoses, otherwise risk of tripping.

Mains

connection

- Connect the dryer correctly to an a.c. earthed socket.
- Cable cross-section must be adequate.
- Use residual-current-operated circuit-breaker with this symbol only: 
- Mains plug and socket must match.
- Do not use multiple plug/couplings and/or extension leads.
- Do not take hold of the mains plug with damp hands.
- Never pull the mains plug out of the socket by tugging the cable.
- Do not damage the power cord.
- Lay the power cord in such a way that it is not a tripping hazard.

Operation

- Load the drum with *washing only*. Check the contents before switching on the dryer.
- Do not use the dryer if washing has come into contact with solvent or paint (e.g. hair spray, nail varnish remover, stain remover, cleaner's naphtha, etc.)
-> risk of fire/explosion!
- Dust hazard (e.g. coal dust, flour): do not use the dryer -> risk of explosion!
- Do not use the dryer if the washing contains foam/rubber -> elastic material may be destroyed and the dryer may be damaged by possible deformation of the foam.
- Switch off the dryer when the programme ends.
- Do not drink the condensation!

Defect

- Do not use the dryer if it is defective or considered to be defective; repairs by customer service only.
- Do not use the dryer if the power cord is defective. To prevent hazards, have a defective power cord replaced by customer service only.

Spare parts

- For reasons of safety use original spare parts and accessories only.

 
Disposal

- Dryer: pull out the mains plug. Cut the power cord off the appliance. Dispose of the appliance at a public disposal centre.
- Packaging: do not allow children to play with packaging parts
-> risk of suffocation!
- All materials are environmentally friendly and recyclable. Dispose of in an environmentally friendly manner.

SIEMENS

Operating and installation instructions

en

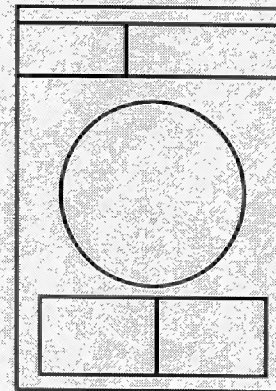

Dryer



Read these instructions before switching on the dryer!
Follow instructions on page 11!

Your new dryer

Congratulations – You have opted for a modern, high-quality domestic appliance of the Siemens brand. The condenser dryer is distinguished by its economical energy consumption.

Each dryer which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

If you have any questions, please do not hesitate to contact our customer service.

Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European directive 2002/96/EG on Waste Electrical and Electronic Equipment – WEEE.



The directive specifies the framework for an EU-wide valid return and recycling of old appliances.

Intended Use

- only in the household;
- only for drying textiles which have been washed with water.



- Do not leave children unattended near the dryer.
- Keep pets away from the dryer.

Preparation



Never use a damaged dryer!
Notify customer service!



With dry hands only!
Take hold of the plug with dry hands only!



Sort and put in the

Take all objects!
Look out for
The drum must be empty

See overview of programmes on page 7.

Selecting + setting pr

Select drying pr

Contents

	Page
■ Preparation	2
■ Setting programmes	2
■ After drying	4
■ About the washing ...	5
■ Servicing and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Technical specifications	9
■ Optional accessories	9
■ What to do if ...	10
■ Safety instructions	11

Programme selector

easy-care cotton

20 min 40 min

Status displays

iron dry, cupboard dry, fluff/finished

Select additional function

start

Low Heat Reduced temperature for sensitive textiles e.g. polyacrylic, polyamide, elastane, acetate, for lo. drying time.

Service displays

Clean fluff filter and/or air cooler. Filter

Empty condensation container. Container

About the washing ...


Identifying textiles

Follow care information of the manufacturer!



Dry at normal temperature.



Dry at low temperature → also select  (Low Heat).




Do not dry by machine.



Do not dry the following textiles in the dryer.

- Airtight textiles (e.g. rubberised).
- Delicate fabrics (silk, synthetic curtains) → anti-creasing!
- Dripping wet washing → high energy consumption!

Drying tips

- For uniform drying result, sort the washing according to fabric type and drying programme.
- Close zips, hooks and eyelets, button up quilt covers, tie fabric belts, apron strings, etc.
- Do not overdry the washing → risk of creasing! Leave the washing to air.
- Do not iron the washing immediately after drying, fold up the washing for a while → residual moisture will then be distributed evenly.
- Knitted textiles (e.g. T shirts, knitted underwear) often shrink when dried for the first time → Do not use the  (Extra Dry) programme.
- The drying of starched washing should be limited → Starch leaves a coating which impairs drying.
- Use the time programme for a small load.

Protection of the environment/Conservation of energy

- Before drying, thoroughly spin the washing in the washing machine → Higher spin speeds reduce the drying time and lower the energy consumption; also spin easy-care washing.
- Use the maximum recommended load, but do not exceed → Page 7, "Overview of programmes".
- Ensure that the room is well ventilated during the drying process.
- Clean the fluff filter after each drying process → Page 4.
- Keep the air cooler clean → Page 6 "Servicing and cleaning".
- Ensure that the cooling air flow is not obstructed → Do not block or seal the cooling grille.

Servicing and cleaning



Appliance must be switched off



Dryer housing, control panel, cooling grille

 
- Rub with a soft, damp cloth.
- Do not use any caustic cleaning agents/solvents.

3–4 times a year or if  (Filter) flashes continuously after the fluff filter has been cleaned.



Air cooler


- Leave the dryer to cool down.
- Residual water may escape, place an absorbent cloth under the maintenance flap.

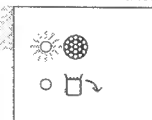

1. Unlock the maintenance flap.
2. Completely open maintenance flap.



 3. Screw both locking levers towards each other.
4. Pull out the air cooler



Do not damage the air cooler!
Clean with warm water only; do not use hard/sharp-edged objects!

5. Clean the air cooler completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air cooler, handle at the bottom!
8. Unscrew both locking levers.



9. Close the maintenance flap until it locks into position.



ation see page 8

Check the dryer



Insert the mains plug



Remove washing

Remove items from the pockets. Remove cigarette lighters! before it is loaded!



Programme

Programme ...

1

... and adjust

2

 
Washing is sensitive, tap is adequate!

Start button

3

Washing

Drying

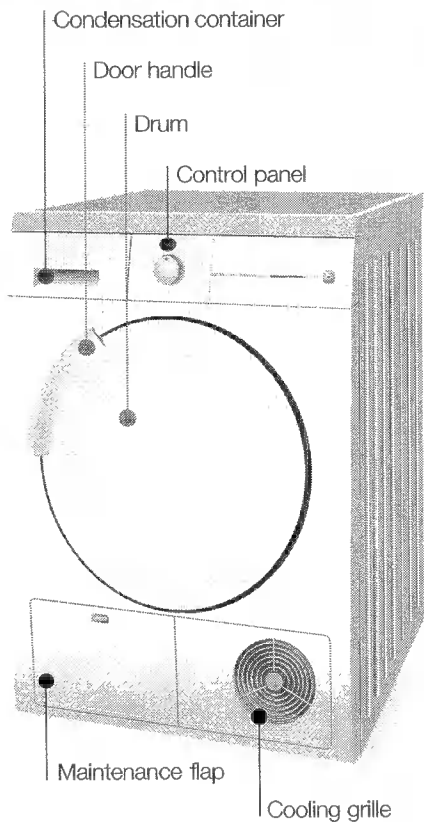


Drying




Draining the condensation

 1. Pull out the container and keep in a horizontal position.
2. Pour out the condensation.
3. Insert the container until it locks into position.

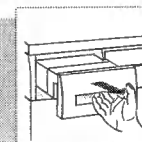


Cleaning the fluff filter

 1. Open door, pull out filter and open.
2. Remove fluff (run hand over filter).
3. Close filter, re-insert and close door.

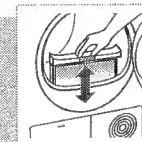

Switching off the dryer

 Set programme selector to 0 (Off).

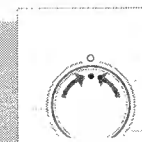

Removing washing

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the (Less Ironing) function is also selected – depending on model).

Programme end as soon as the light comes on



Topping up or removing washing

1. Open door, the drying process is terminated.
2. Top up or remove washing and close door.
3. If required, reselect programme and additional functions.
4. Select start button.



Drum and door may be hot.

Technical specifications

- Dimensions (D x W x H)	60 x 60 x 85 cm (height-adjustable)
- Weight (net)	approx. 45 kg
- Max. capacity	6 kg
- Condensation container	4.2 l
- Supply voltage	See appliance rating plate
- Connected load	
- Fuse	
- Product number (E-Nr.)	
- Production number (FD)	

The appliance rating plate is situated on the rear of the dryer.

Consumption values Specifications are approximate values determined under normal conditions. Fluctuations up to 10% are possible.

	Spin speed r.p.m. (residual humidity)	Drying time in min. with 8 min. cooling time	Energy consumption in kWh		
			10 A	16 A	
👤 cotton 6 kg					
👤 (Cupboard Dry*)	1400 (approx. 50%)	100	80	3.0	3.0
	1000 (approx. 60%)	118	96	3.6	3.6
	800 (approx. 70%)	140	110	4.2	4.2
👤 (Iron Dry*)	1400 (approx. 50%)	76	56	2.2	2.2
	1000 (approx. 60%)	94	72	2.8	2.8
	800 (approx. 70%)	116	86	3.4	3.4
👤 easy-care 3 kg					
👤 (Cupboard Dry*)	800 (approx. 40%)	42	36	1.2	1.2
	600 (approx. 50%)	53	45	1.5	1.5

* Test programmes according to DIN EN 61 121 and IEC 61 121

Drum light (depending on model)
(Bulb E14, 15 W)

The drum is lit when the door is opened and closed or when the programme starts; it goes out automatically.

Optional accessories

Order no.

WZ 20160 Connection fittings for condensation outlet

The condensation is conveyed directly via a hose.

WZ 20310 Connection set for washing-drying column

To save space, the dryer can be placed on a suitable washing machine which has the **same depth and width**.

WZ 20300 Same as WZ 20310 but with removable worktop.

WZ 20290 Cover for appliance underneath worktop

The dryer can be built under the worktop in a line of kitchen units.

What to do if ...



Repairs may be carried out by customer service or authorised technicians only!

Before you call customer service, please check whether you can correct the fault yourself. A technician will charge you for advice, even during the warranty period. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance (see inside of door).

- ⚡ start indicator light does not come on.

Is the mains plug inserted?
Programme selected?
Check fuse in the house.
- 👤 (Container) and ⚡ start indicator lights are flashing.

Empty condensation container.
If featured, check hose for condensation outlet.
- 🌀 (Filter) and ⚡ start indicator lights are flashing.

Clean air cooler, page 6 "Servicing and cleaning".
Clean fluff filter, page 4.
- Dryer does not start.

⚡ start button selected?
Door closed?
Programme set?
Ambient temperature higher than 5 °C?
- Water is running out.

Align dryer horizontally.
Clean air cooler seal.
- Door is opening by itself.

Press door until it "clicks" into position.
- Degree of dryness was not reached or drying time too long.

Clean fluff filter/air cooler, page 4/6.
Empty condensation container.
Check water outlet (if featured).
Ambient temperature above 30 °C → adequate ventilation.
Cooling grille may be blocked → unblock.
Unsuitable programme set? Page 7.
Dryer installation too restricted? Provide air circulation.
Power failure → restart dryer.
- Washing damp.

Use next higher drying programme or also the time programme, page 7.
Warm washing feels damper than it actually is!
- Humidity in the room is increasing significantly.

Ventilate room adequately.
Cooling grille blocked? → Unblock.
Ensure that the air cooler has been inserted.
- One or more indicator lights for programme status are flashing.

Clean filter and air cooler, page 4/6.
Check installation conditions, page 8.
Switch off, leave to cool down, switch on again, restart programme.
- Does the interior light (depending on model) work?

Open cover inside the appliance above the door (with a Torx 20 screwdriver) and change the bulb.
Close the cover flap.

If you cannot correct a fault yourself or if a repair is required:

- Set programme selector to 0 (Off).
- Pull out the mains plug.

Overview of programmes

See also page 5

	T-Shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothes	Anorak	Towelling bathrobe	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/hand towels
After drying:														
iron the washing														
lightly iron the washing														
do not iron the washing														
mangle the washing														
cotton														
max. 6 kg														
(Iron Dry)														
(Cupboard Dry)														
(Cupboard Dry Plus)														
(Extra Dry)														
easy-care														
max. 3 kg														
(Iron Dry)														
(Cupboard Dry)														
(Very Dry)														
(Programme time)														
40 min / 20 min														

For cottons and coloureds made of cotton or linen.

For non-iron washing made of synthetic and blended fabrics, cotton.

For pre-dried, multi-ply, delicate textiles made of acrylic fibres or for individual small items. Also for subsequent drying.

WT44E1609K
WT44E1609K
07.05.cen
90009 78783

Further information and a selection of our products can be found on our Internet page:
<http://www.siemens-international.com>

Installation



- Included in standard delivery: dryer, operating and installation instructions.
- Mains plug not inserted!
- Check dryer for damage which may have been caused in transit.
- Dryer is heavy. Do not lift it by yourself!
- Beware of sharp edges!
- Do not install in a room where there is a risk of frost! Freezing water may result in damage.
- If in doubt, have a technician connect the appliance.
- Do not lift the dryer by projecting components (e.g. door) – risk of breakage!

 
 
1.

Installing the dryer



Take all accessories out of the drum. Drum must be empty!

- Mains plug must be accessible at all times!
- Place the dryer on a clean, level and firm surface!
- Do not obstruct cooling grille at the front of the dryer.
- Keep the area around the dryer clean.
- Align the dry with the height-adjustable feet. Use a spirit level.
- Never remove the height-adjustable feet!

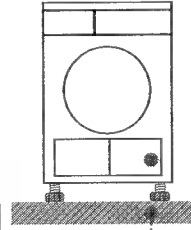

Clean and level!
Do not obstruct cooling grille

2.

Mains connection

see Safety instructions, page 11.

- Connect the dryer correctly to an a.c. earthed socket.
- Mains voltage must correspond with the voltage specifications on the appliance rating plate (see page 9)!
- Wattage and required fuse are indicated on the appliance rating plate.

 
3.

Switching over the connected load



Check your socket fuse!


10/16 ampere



Feedback signals
(depending on model)

10 A
16 A

 Display field



If required, select repeatedly.

Frost protection/ transportation



Do not operate the dryer if there is a risk of frost!



Preparation

1. Empty condensation container, see page 4.
2. Set programme selector to any programme.
3. Select start button -> condensation is pumped into the container.
4. Wait 5 min., empty condensation container again.
5. Set programme selector to 0 (Off).