 


# SIEMENS WASHER (WXLM 128S)

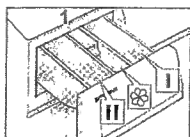

## Filling laundry detergent and/or additive dispensers

### Dispenser I:

 
 
Detergent for prewash or starch.

### Dispenser II:


Detergent for main wash, water softener, pre-soaking agent, bleach and stain removal product

### Dispenser :


Additives, e.g. fabric softener or former (fill no higher than lower edge of insert 1).

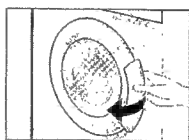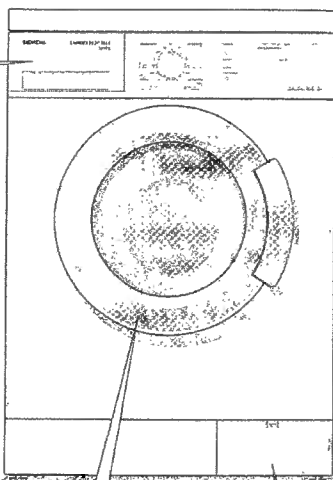

Opening ...

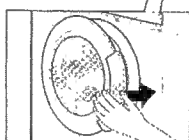 

and closing the door.

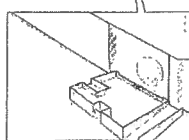 

Draining the washing lye, if required.

## Control panel

 
### 1. Select a program.

Switches the washing machine on/off. Can be rotated in either direction. The program selector does not rotate while the program is running; the program sequence is electronically controlled.

### 2. Indicator lights illuminate

**Bereit (On)**, when program selected  
**Waschen, Spülen, Schleudern** (Wash, Rinse, Spin) when Start is pressed.  
**Ende (End)** when program is finished.  
 Indicator lights flash; Operation error.

Aus = Off  
 Pflegeleicht = Easy-care  
 Fein/Schnell = Delicates/Short Wash  
 Wolle = Wool  
 kalt = cold  
 = Hand wash symbol  
 Koch/Bunt = Cottons/Colors  
 Intensiv = Intensive  
 Flecken = Stains  
 Vorwäsche = Prewash  
 Abpumpen = Drain  
 Spülen = Rinse  
 Schleudern = Spin

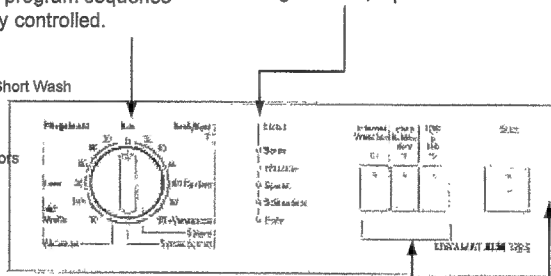

### 3. Press buttons for additional option

(if required, in addition to the regular program sequence)  
**1200 → 600** reduces the final spin speed from 1200 to 600

**Ohne Schleudern** = No Final Spin

**Intensiv Waschen** = Longer intensive Wash setting

Combining of additional options possible at any time during the program

Indicator lights illuminate when option activated.

Switch off the additional option: press button again.

### 4. Press the Start button

The washing process begins (program must have been selected).

## Programs and functions

**Basic programs:** Select the desired program. Wash programs are preset to handle lightly soiled materials. For heavily soiled items select fewer items or use the intensive wash button.

**90 °C Cottons** – An energy-intensive program for heat-resistant textiles, e.g. cotton or linen.

To protect the waste-water pipes, the hot water is mixed with approx. 7 liters of cold water.

**60 °C Intensive Stains, Coloreds** – For stained, soiled textiles, e.g. cotton or linen. Energy saving program. The extended washing time achieves a cleaning result comparable to that of the 90 °C program, but uses considerably less energy.

**60 °C Coloreds +Prewash** – For hard-wearing textiles, e.g. cotton or linen.

**30, 40, 60 °C Coloreds** – For hard-wearing textiles, e.g. cotton or linen.

**30, 40, 60 °C Easy Care** – For easy-care textiles, e.g. cotton, linen, synthetic materials or blend fabrics.

**30 °C Delicates** – For delicate, washable textiles, e.g. silk, satin, synthetic materials or blend fabrics (e.g. curtains). Delicates cycle at 30 °C for hand and machine washable silk. Washing these textiles with other rougher textiles is not recommendable. To treat very delicate silk textiles even more gently use the short wash program. No spinning between rinse cycles. Maximum spin speed: 600 r.p.m.

**cold, 30 °C Wool** – For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora.

### Extra cycle program selector

**Rinse** – Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Maximum spin speed: 800 r.p.m.

**Spin** – Spin cycle for spinning hand-washed laundry. Washing lye or rinsing water is drained prior to the spin cycle. Maximum spin speed: 800 r.p.m.

**Empty** – Water is drained after a program with the **No Final Spin** setting for gentle treatment of delicate laundry.

### Spin speed selector

### Basic setting – In the Cottons/Coloreds

program the fabrics will be spun at the maximum possible spin speed. In the **Easy-Care, Delicates** and **Wool** programs, a lower spin speed will automatically be used, - for the gently washing of the laundry.

### Maximum spin speeds

Revolutions per minute	Program / Program options
1200	Cottons/Coloreds
800	Easy-Care
600	Delicates
800	Wool
800	Rinse
800	Spin

### Additional function on spin speed selector

**No Final Spin** – For delicate textiles and net curtains. All programs can be carried out without the final spin cycle. The laundry is left in the final rinsing water. Before the laundry can be unloaded, the **Rinse** or **Spin** program must be performed.

Note: All of the previous rinse cycles have a short intermediate spin cycle apart from the program **Delicates**. This improves the results of the rinse.

### Additional functions

**Load adjust** – "Load adjust" matches the water and power consumption to each program – according to the amount of washing and type of textiles. Water and energy consumption is therefore reduced when washing small amounts of laundry.

**Unbalanced load detection system** – The automatic unbalanced load detection system spins the washing several times to ensure even distribution. If the washing is very unevenly distributed, it is not spun for reasons of safety or the end speed is reduced. In the woolens program the washing is spun only twice to prevent matting.

### Washing

1. Open the Tap
2. Turn the program selector to the desired program. The **On** indicator light is on.
3. Select the desired spin speed or **No Final Spin**
4. Press the **Start** button. The **Active** indicator light is on and the program starts.

### Changing a program

If you accidentally selected the wrong program:

1. Turn the program selector to **Off**.
2. Turn the program selector to the desired program. The **On** indicator light is on.
3. Press the **Start** button. The **Active** control light comes on, and the new program starts.

### Canceling active program

If you want to prematurely end a program:

1. Turn the program selector to **Off**.
2. Turn the program selector to **Drain** or **Spin**. The **On** indicator light is on.

Note: For **Spin**, select the desired spin speed (but not **No Final Spin**).

3. Press the **Start** button. The **Active** indicator light is on.

### When the Program has Ended

The **End** indicator light is on.

1. Turn the program selector to **Off** and if required
2. Select an additional program (**Drain, Spin** or **Rinse**).
3. Press the **Start** button.
4. At the end of the additional program turn the program selector to **Off**.

### Unloading the laundry

1. Turn off the tap.
2. Open the door. If the door cannot be opened: Wait approx. for 2 minutes (the safety function is active) - or - there is still water in the washing machine if the **No Final Spin** option was selected. Select **Drain** or **Spin**.
3. Unload the laundry. Note: Leave the loading door open to allow the inside of the washing machine to dry out.

### Cleaning the detergent dispenser

In the event that residual detergents or additives have accumulated:

1. Pull out the detergent dispenser up to the end, stop and press down the hollow insert located in the center and remove the detergent dispenser completely.
2. Pull out the insert.
3. Clean the detergent dispenser and insert under running water.
4. Attach the insert and lock into position
5. Insert the detergent dispenser.

