Safety instructions

Emergency
- Pull the appliance plug out of the socket immediately or disconnect the fuse.

ONLY use the dryer...
- In rooms inside the house.
- To dry fabrics.

The dryer must NEVER...
- Be used for other purposes than those described above.
- Be modified in terms of its technology or attributes.

Dangers
- The dryer must not be used by children or persons who have not been instructed in its use.
- Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- Remove all objects from pockets.
  Make especially sure that cigarette lighters are removed as they constitute an **→ explosion hazard.**
- Do not lean or sit on the door **→ risk of tipping.**

Installation
- Secure loose cables **→ tripping hazard.**
- Do not operate the dryer if there is a risk of frost.

Mains connection
- Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe.
- The cable cross-section must be sufficient.
- Only use earth-leakage circuit breakers with the following symbol: ⊔
- The appliance plug and socket must be compatible.
- Do not use multiple plugs/couplings and/or extension cables.
- Do not hold the appliance plug with wet hands **→ risk of electric shock.**
- Never pull the appliance plug out of the socket by its cable.
- Do not damage the mains lead **→ risk of electric shock.**

Operation
- Only load the drum with laundry.
  Check the contents before you switch the dryer on.
- Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) **→ fire/explosion hazard.**
- Dust (e.g. coal dust, flour) poses a danger: do not use the dryer **→ explosion hazard.**
- Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
- Switch off the dryer once the programme has ended.
- Condensation is not drinking water and may be contaminated with fluff.

Defect
- Do not use the dryer if it is defective or if you suspect it is.
  Repairs must only be carried out by the after-sales service.
- Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Always pull the mains plug out of the socket before changing the bulb for the interior light **→ risk of electric shock.**

Spare parts
- Only use genuine spare parts and accessories for safety reasons.

Disposal
- Dryer: pull out the appliance plug, then cut off the mains cable from the appliance.
  Dispose of at municipal waste disposal facility.
- Packaging: do not leave children alone with packing parts **→ risk of suffocation.**
- All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

Observe the safety instructions on page 11.

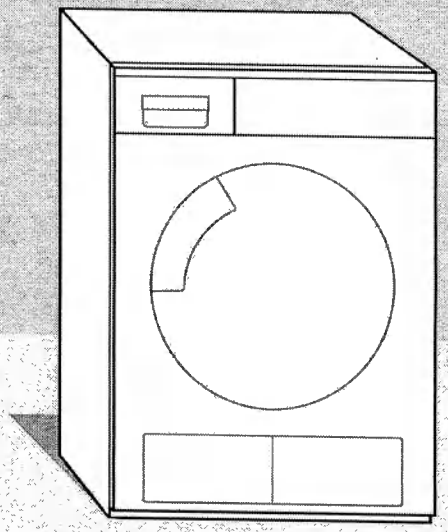

Tumble dryer

Instructions for installation and use

en

WT46E103 (WT46E100GB)

SIEMENS



Read these instructions before operating the dryer.

Your new dryer

Congratulations - You have chosen a modern, high-quality Siemens domestic appliance.
The condensation dryer is distinguished by its economical energy consumption.
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner
Dispose of packaging in an environmentally-responsible manner.
This appliance is labelled in accordance with the European guideline 2002/96/EG on waste electrical and electronic equipment - WEEE.
The guideline provides an EU-wide framework for the return and recycling of old appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Information on laundry	5
Care and cleaning	6
Programme overview	7
Installation	8
Frost protection/transport	8
Technical data	9
Optional accessories	9
What to do if... / After-sales service	10
Safety instructions	11

Intended use

- for domestic use only,
- only to be used for dry washed with water.

Do not leave childre
Keep pets away fro

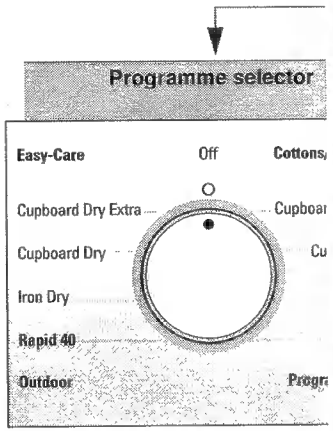

Clean the fluff filter and/or air cooler → pa
Empty the condensation cc

What to do if ...

If you cannot rectify a fault yourself, please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:
- **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

The **Start/Stop** indicator lamp does not light up.	Mains plug plugged in? Programme selected?
The **Empty water** and **Start/Stop** indicator lights are flashing.	Empty the condensation container. If featured, check hose for condensation outlet.
The **Clean filter** and **Start/Stop** indicator lights are flashing.	Clean the fluff filter and/or air cooler → *Page 4/6.*
Dryer does not start.	**Start/Stop** button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
Water is running out.	Align dryer horizontally. Clean air cooler seal.
The door opens by itself.	Push the door closed until you hear it engage.
The required degree of dryness was not achieved or the drying time was too long.	Clean the fluff filter and/or air cooler → *Page 4/6.* Empty condensation container → *Page 4.* Check water outlet (if featured). Ambient temperature higher than 35 °C → airing. Air inlet may be blocked → keep unobstructed. Was an unsuitable programme selected? → *Page 7.* Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Fine layer of scale on the moisture sensors → Clean the moisture sensors → *page 6.*
Laundry damp.	Use the next drying programme up or use the timer programme as a supplement → *Page 7.* Warm laundry feels damper than it really is!
The moisture content of the room has increased significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → keep unobstructed. Ensure that the air cooler has been inserted.
Mains failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
One or more indicator lights for programme status are flashing.	Clean filter and air cooler → *Page 4/6.* Check installation conditions → *Page 8.* Switch off, leave to cool down, switch on again, restart programme.
The interior light is not working *(depending on model)*.	Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screw driver) and replace the bulb. Close the cover cap. Never operate the dryer without a cover cap.

Technical data

Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 45 kg
Max. capacity	8 kg
Condensation container	4.2 l
Connection voltage	
Connected load	
Fuse protection	see appliance rating plate
Ambient temperature	
Product number/ Production number	

You can find the rating plate on the back of the dryer.

Consumption rates These are guide values determined under standard conditions. Fluctuations up to 10% are possible.

	Spin speed in rpm (residual moisture)	Drying time in min.**	Energy consumption in kWh**
Cottons/Coloureds 8 kg		**13 A**	**13 A**
Cupboard Dry*	1400 (approx. 50 %)	105	3.74
	1000 (approx. 60 %)	122	4.49
	800 (approx. 70 %)	139	5.17
Iron Dry*	1400 (approx. 50 %)	83	2.24
	1000 (approx. 60 %)	100	3.44
	800 (approx. 70 %)	117	3.86
Easy-Care 3.5 kg	1000	39	1.05
Cupboard Dry*	800 (approx. 40 %)	42	1.35
	600 (approx. 50 %)	51	1.65

*Test program according to DIN EN 61121.
**The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

Drum interior light *(depending on model)* ***(bulb E14, 25 W)***
The drum is illuminated after the door is opened or closed, and also after the programme is started. It goes out automatically. Replacing the bulb → *Page 10.*

Optional accessories *(order from the after-sales service using the order number)*

WZ 20160 ***Connection fittings for condensation outlet***
The condensation is conveyed directly via a hose.

WZ 20310 ***Washer-dryer stack connection set***
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space.
This connection set **must** always be used to secure the dryer to the washing machine.

WZ 20300 Same as WZ 20310, but with pull-out worktop.

WZ 20290 ***Installation underneath the worktop***
Risk of electric shock!
Instead of the appliance covering plate, you must have a metal cover fitted by an expert.

g fabrics that have been

unsupervised near the dryer.
the dryer.

e 4/6.
tainer.

Preparing for *Installation, see Page 8*

Never start the dryer if it is damaged!
Inform your after-sales service.

Ins

Make sure your hands are dry.
Hold the plug only.

Cor

Sorting and lo

Remove all items from pockets.
Check for cigarette lighters.
The drum must be empty prior to loading.

See programme overview on page 7.

Selecting and adjusting th

Select the d

... and adapt to indiv

	Display panel	Additional functions
oloureds	AntiCrease/End	
	Cupboard Dry	
Dry Extra	Iron Dry	Low Heat
oard Dry	Drying	
Iron Dry		Start Stop
warm 20	Clean filter	
ime time	Empty water	

Service displays	
Clean filter	
Empty water	

All buttons are
need to be tou

Press th

Only operate
the fluff filter i

Low Heat Reduced temperature for delicate fabrics ☐ that re longer drying time; e.g. for polyacrylics, polyamide or acetate.

specting the dryer

nnecting the mains plug

oading laundry

ne programme

rying programme ...

idual requirements

sensitive and only
ched lightly.

ne Start/Stop button

the dryer with
nserted!

quire a
, elastane

Drying

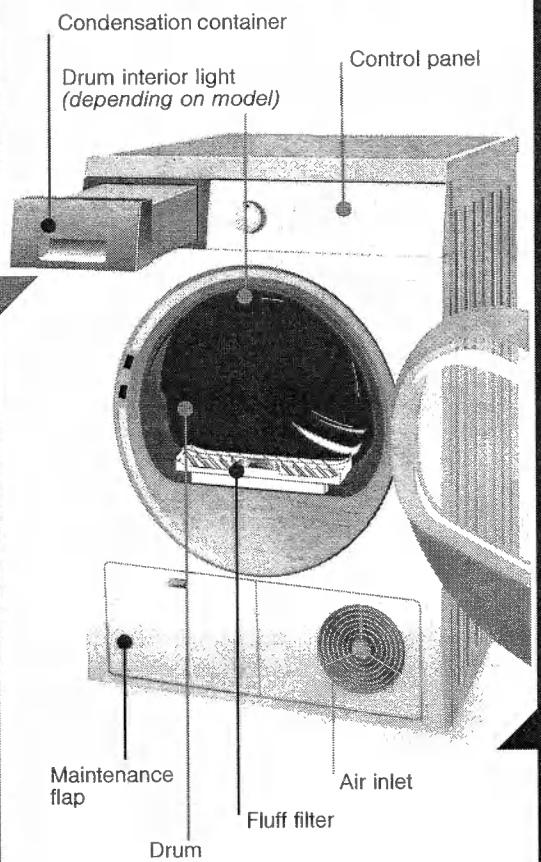

1
2
3

Drying

Installation

- Delivery specification: dryer, instructions for installation and use.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.
- Do not set up in a room that is susceptible to frost.
  Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.

1. Setting up the dryer

Take all accessory parts out of the drum. The drum must be empty.

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and solid surface.
- Keep the cooling grille at the front of the dryer unobstructed.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
  Do not remove the threaded feet under any circumstances.

Do not set up the dryer behind a door or sliding door as this may obstruct or prevent the dryer door from opening. This will prevent a potentially fatal danger to children from locking themselves in.

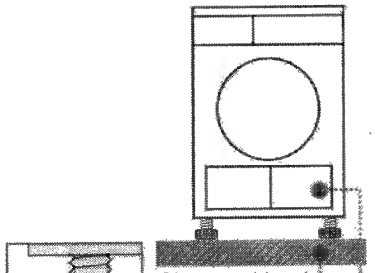

Clean and level

Make sure that the air inlet remains unobstructed

2. Mains connection *see safety instructions ⟶ Page 11.*

- Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (⟶ *Page 9*) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection/transport

Do not operate the dryer if there is a danger of frost.

Preparation

1. Empty the condensation container ⟶ *page 4.*
2. Select any programme using the programme selector.
3. Press the **Start**/Stop button ⟶ condensation is pumped into the container.
4. Wait 5 min., and then empty the condensation container again.
5. Turn the programme selector to **Off**.

Programme overview *also see Page 5*

After drying: laundry is to be ...																		
☰ ironed																		
☰ lightly ironed dry																		
☰ not ironed																		
⊘ passed through a mangle																		
Cottons/Coloureds	**max. 8 kg**	*For whites and coloureds/cotton or linen.*																
Iron Dry	☰ ☰ ☰ ⊘	✓	✓	✓		✓							✓					✓
Cupboard Dry	☰												✓				✓	✓
Cupboard Dry Extra	☰												✓				✓	✓
Easy-Care	**max. 3.5 kg**	*For non-iron laundry made of synthetic fibres and blended fabric, cotton.*																
Iron Dry	☰ ☰ ☰ ⊘				✓	✓												
Cupboard Dry	☰				✓													
Cupboard Dry Extra	☰																	
Outdoor	**max. 1.5 kg**	*For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).*																
Rapid 40	**max. 2 kg**	*For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.*																
Programme time warm 20	**max. 3 kg**	*For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.*																

Siemens Electrogeräte GmbH
Carl-Wery-Str. 34
81739 München/Germany
WT46E100GB
1110 9000517636

Emptying condensation

Empty container **after** each drying operation!
- Pull out condensation container keeping it horizontal.
- Pour out condensation.
- Always push container in fully until it clicks into place.

Empty water flashes in the display panel ⟶ *What to do if..., Page 10.*

Cleaning the fluff filter

Clean the fluff filter **after** each drying operation.
- Open the door, remove fluff from door/door area.
- Pull out and fold open the fluff filter.
- Remove the fluff (by wiping the filter with your hand).
- If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
- Close and reinsert the fluff filter.

Switching off the dryer

Turn the programme selector to **Off**.
Do not leave laundry in the dryer.

Removing the laundry

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the additional **Less Ironing** function is also selected-*depending on model*).

Programme end *as soon as the light comes on.*

Interrupt programme *removing or adding laundry.*

The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed.

Never switch the dryer off before the drying process has ended. Drum and door may be hot!

Open door, the drying process is interrupted.
Load or remove laundry and close door.
If required, select a new programme and additional functions.
Press the **Start**/Stop button.

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

☐ Drying at normal temperature.
☐ Drying at low temperature ⟶ also select **Low Heat**.
☒ Do not machine dry.

Observe safety instructions without fail ⟶ *Page 11*!
Do not tumble-dry the following fabrics for example:
- Impermeable fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk or curtains made from synthetic material) ⟶ they may crease
- Laundry contaminated with oil.

Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Close zips, hooks and eyelets, and button up covers.
  Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry ⟶ risk of creasing!
  Allow laundry to finish drying in the air.
- Do not dry woolens in the dryer, only use to freshen them up ⟶ *Page 7*, ***Woollens Finish Programme (depending on model).***
- Do not iron laundry immediately after drying, fold items up and leave for a while ⟶ the remaining moisture will then be distributed evenly.
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried ⟶ do not use the **Cupboard Dry Extra** programme.
- Starched laundry is not always suitable for dryers ⟶ starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads ⟶ this improves the drying result.

Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine ⟶ the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry ⟶ programme overview ⟶ *Page 7*.
- Make sure the room is well ventilated during drying.
- Do not obstruct or seal up the air inlet.
- Keep the air cooler clean ⟶ *page 6 "Care and cleaning"*.

Care and cleaning

Only when switched off!

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal.
  This does not affect your dryer's functions in any way.

*Clean the air cooler 5 - 6 times a year or if **Clean filter** flashes after cleaning the fluff filter.*

Air cooler

- *Allow the dryer to cool.*
- *Residual water may leak out, so place an absorbent towel underneath the maintenance door.*

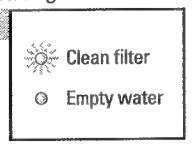

1. Unlock the maintenance door.
2. Open the maintenance door fully.

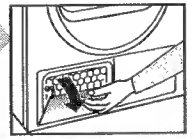

3. Turn both locking levers towards each another.
4. Pull out the air cooler.

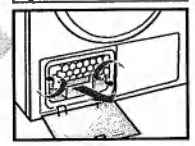

Do not damage the air cooler.
Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly,
   Allow to drip dry.
6. Clean the seals.
7. Re-insert the air cooler,
   with the handle facing down.
8. Turn back both locking levers.
9. Close the maintenance door until the lock clicks into place.

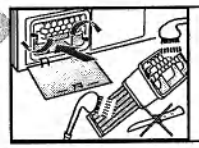

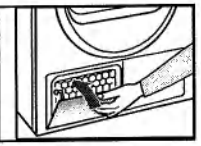

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

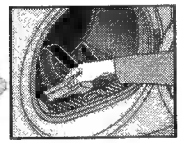

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Safety instructions

Emergency	– Pull the appliance plug out of the socket immediately or disconnect the fuse.
ONLY use the dryer...	– In rooms inside the house. – To dry fabrics.
The dryer must NEVER...	– Be used for other purposes than those described above. – Be modified in terms of its technology or attributes.
Dangers	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets. Make especially sure that cigarette lighters are removed as they constitute an **→ explosion hazard.** – Do not lean or sit on the door **→ risk of tipping.**
Installation	– Secure loose cables **→ tripping hazard.** – Do not operate the dryer if there is a risk of frost.
Mains connection	– Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The appliance plug and socket must be compatible. – Do not use multiple plugs/couplings and/or extension cables. – Do not hold the appliance plug with wet hands **→ risk of electric shock.** – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead **→ risk of electric shock.**
Operation	– Only load the drum with laundry. Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) **→ fire/explosion hazard.** – Dust (e.g. coal dust, flour) poses a danger: do not use the dryer **→ explosion hazard.** – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. – Switch off the dryer once the programme has ended. – Condensation is not drinking water and may be contaminated with fluff.
Defect	– Do not use the dryer if it is defective or if you suspect it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service. – Always pull the mains plug out of the socket before changing the bulb for the interior light **→ risk of electric shock.**
Spare parts	– Only use genuine spare parts and accessories for safety reasons.
Disposal	– Dryer: pull out the appliance plug, then cut off the mains cable from the appliance. Dispose of at municipal waste disposal facility. – Packaging: do not leave children alone with packing parts **→ risk of suffocation.** – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

Observe the safety instructions on page 11

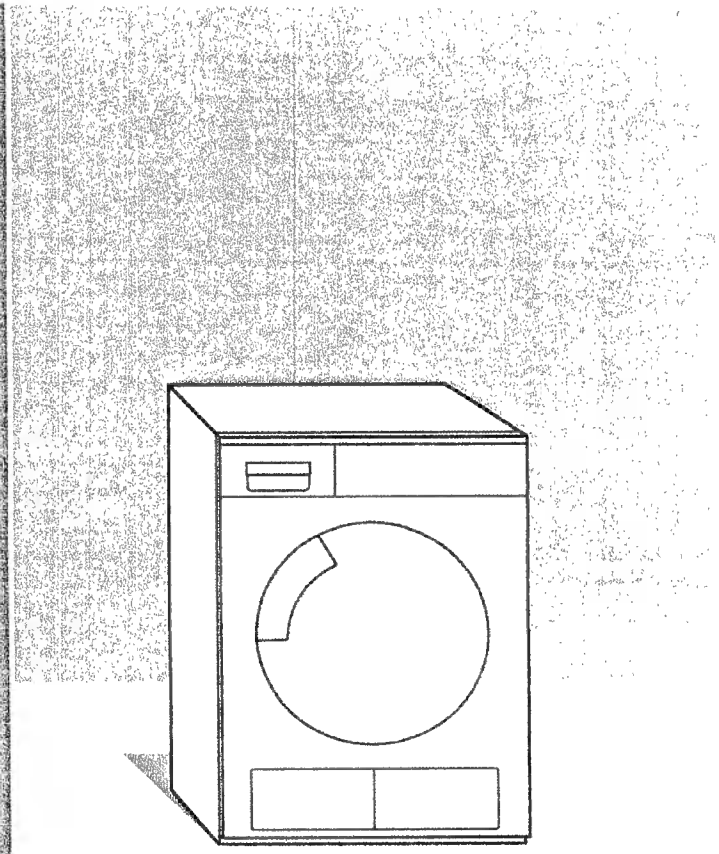

Tumble dryer

Instructions for installation and use

en

SIEMENS

Read these instructions before operating the dryer.

WT46E103

Your new dryer

Congratulations - You have chosen a modern, high-quality Siemens domestic appliance.
The condensation dryer is distinguished by its economical energy consumption.
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner
Dispose of packaging in an environmentally-responsible manner.
This appliance is labelled in accordance with the European guideline 2002/96/EG on waste electrical and electronic equipment - WEEE.
The guideline provides an EU-wide framework for the return and recycling of old appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Information on laundry	5
Care and cleaning	6
Programme overview	7
Installation	8
Frost protection/transport	8
Technical data	9
Optional accessories	9
What to do if... / After-sales service	10
Safety instructions	11

Intended use

- for domestic use only,
- only to be used for drying fabrics that have been washed with water.

Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.

Preparing for

installation, see Page 8

Never start the dryer if it is damaged!
Inform your after-sales service.

Ins

Make sure your hands are dry.
Hold the plug only.

Cor

Sorting and lo

Remove all items from pockets.
Check for cigarette lighters.
The drum must be empty prior to loading.

See programme overview on page 7.

Selecting and adjusting th

Select the d

... and adapt to indiv

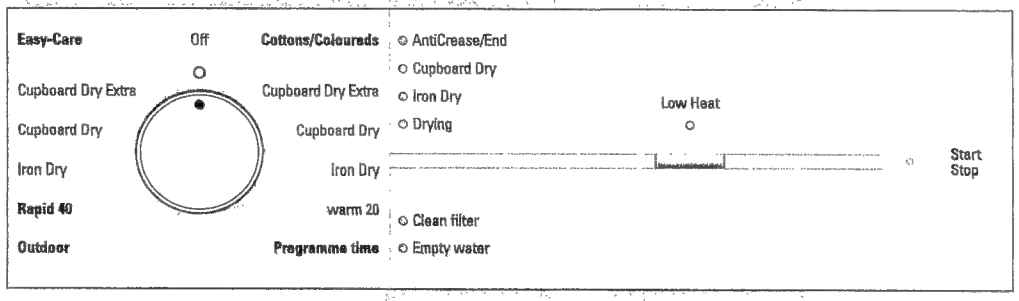

All buttons are
need to be tou

Press tl

Only operate
the fluff filter i

Service displays

Clean the fluff filter and/or air cooler ⟶ page 4/6. **Clean filter**
Empty the condensation container. **Empty water**

- **Low Heat** Reduced temperature for delicate fabrics that re longer drying time; e.g. for polyacrylics, polyamide or acetate.

Check the dryer

nsert the ains plug

washing

ut of the pockets. cigarette lighters! efore it is loaded!

ogramme

ogramme ... 1

.. and adjust 2

ns are sensitive, tap is adequate!

Start button 3

, for longer

Drying

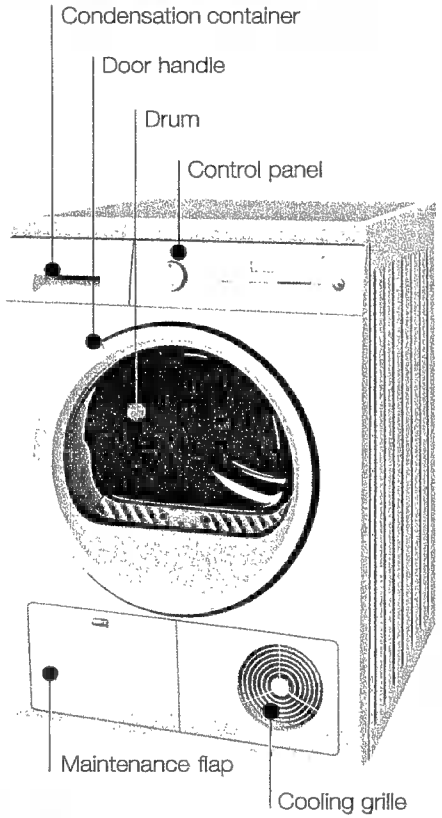

Drying

Draining the condensation

Empty container **after** each drying operation!

1. Pull out the container and keep in a horizontal position.
2. Pour out the condensation.
3. Insert the container until it locks into position.

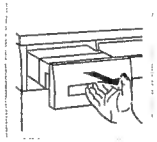

Cleaning the fluff filter

1. Open door, pull out filter and open.
2. Remove fluff (run hand over filter).
3. Close filter, re-insert and close door.

Rinse extremely soiled or blocked filters with warm water and dry thoroughly.

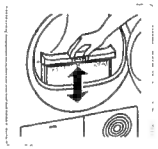

Switching off the dryer

Set programme selector to **Off**.

Do not leave damp washing in the dryer!

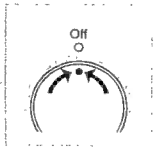

Removing washing

*The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the **AntiCrease** function is also selected – depending on model).*

Programme end *as soon as the light comes on*

AntiCrease/Τέλος

Topping up or removing washing

1. Open door, the drying process is terminated.
2. Top up or remove washing and close door.
3. If required, reselect programme and additional functions.
4. Select **Start/Stop** button.

⚠ *Drum and door may be hot.*

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

☐ Drying at normal temperature.
☐ Drying at low temperature ⟶ also select **Low Heat.**
☒ Do not machine dry.

Observe safety instructions without fail ⟶ *Page 11*!
Do not tumble-dry the following fabrics for example:
- Impermeable fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk or curtains made from synthetic material) ⟶ they may crease
- Laundry contaminated with oil.

Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Close zips, hooks and eyelets, and button up covers.
  Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry ⟶ risk of creasing!
  Allow laundry to finish drying in the air.
- Do not dry woolens in the dryer, only use to freshen them up ⟶ *Page 7, **Woollens Finish** Programme (depending on model).*
- Do not iron laundry immediately after drying, fold items up and leave for a while ⟶ the remaining moisture will then be distributed evenly.
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried ⟶ do not use the **Cupboard Dry Extra** programme.
- Starched laundry is not always suitable for dryers ⟶ starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads ⟶ this improves the drying result.

Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine ⟶ the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry ⟶ programme overview ⟶ *Page 7.*
- Make sure the room is well ventilated during drying.
- Do not obstruct or seal up the air inlet.
- Keep the air cooler clean ⟶ *page 6 "Care and cleaning".*

Care and cleaning

Only when switched off!

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal.
  This does not affect your dryer's functions in any way.

*Clean the air cooler 5 - 6 times a year or if **Clean filter** flashes after cleaning the fluff filter.*

Air cooler

- *Allow the dryer to cool.*
- *Residual water may leak out, so place an absorbent towel underneath the maintenance door.*

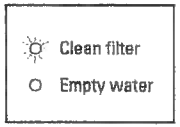

1. Unlock the maintenance door.
2. Open the maintenance door fully.

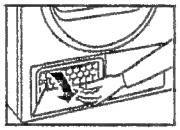

3. Turn both locking levers towards each another.
4. Pull out the air cooler.

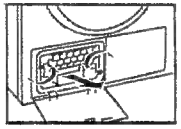

Do not damage the air cooler.
Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly.
   Allow to drip dry.
6. Clean the seals.
7. Re-insert the air cooler,
   with the handle facing down.
8. Turn back both locking levers.
9. Close the maintenance door until the lock clicks into place.

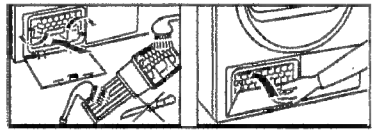

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

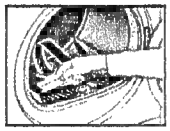

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Programme overview also see Page 5

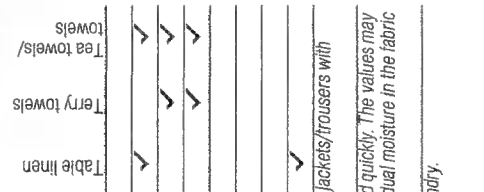

After drying: laundry is to be ...

- *ironed*
- *lightly ironed dry*
- *not ironed*
- *passed through a mangle*

		T-shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothing	Anoraks	Towelling dressing gowns	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ towels
Cottons/Coloureds	max. 8 kg	*For whites and coloureds/cotton or linen.*													
Iron Dry		✓		✓	✓		✓			✓		✓	✓		✓
Cupboard Dry										✓	✓	✓		✓	✓
Cupboard Dry Extra									✓	✓	✓	✓		✓	✓
Easy-Care	max. 3.5 kg	*For non-iron laundry made of synthetic fibres and blended fabric, cotton.*													
Iron Dry			✓	✓	✓		✓		✓						
Cupboard Dry			✓		✓	✓									
Cupboard Dry Extra						✓		✓				✓	✓		
Outdoor	max. 1.5 kg	*For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).*													
Rapid 40	max. 2 kg	*For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.*													
Programme time warm 20	max. 3 kg	*For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.*													

1110 / 9000517536

Siemens Electrogeräte GmbH
Carl-Wery-Str. 34
81739 München/Germany

WT46E100GB

Installation

- Delivery specification: dryer, instructions for installation and use.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.
- Do not set up in a room that is susceptible to frost.
  Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.

1. *Setting up the dryer*

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and solid surface.
- Keep the cooling grille at the front of the dryer unobstructed.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
  Do not remove the threaded feet under any circumstances.

Take all accessory parts out of the drum. The drum must be empty.

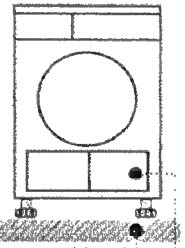

Clean and level

Do not set up the dryer behind a door or sliding door as this may obstruct or prevent the dryer door from opening. This will prevent a potentially fatal danger to children from locking themselves in.



Make sure that the air inlet remains unobstructed

2. *Mains connection* *see safety instructions ⟶ Page 11.*

- Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (⟶ *Page 9*) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection/transport

Do not operate the dryer if there is a danger of frost.

Preparation

1. Empty the condensation container ⟶ *page 4.*
2. Select any programme using the programme selector.
3. Press the **Start**/Stop button ⟶ condensation is pumped into the container.
4. Wait 5 min., and then empty the condensation container again.
5. Turn the programme selector to **Off**.

Technical data

Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 45 kg
Max. capacity	8 kg
Condensation container	4.2 l
Connection voltage	
Connected load	
Fuse protection	see appliance rating plate
Ambient temperature	
Product number/ Production number	

You can find the rating plate on the back of the dryer.

Consumption rates These are guide values determined under standard conditions. Fluctuations up to 10% are possible.

	Spin speed in rpm (residual moisture)	Drying time in min.**	Energy consumption in kWh**
Cottons/Coloureds 8 kg		**13 A**	**13 A**
Cupboard Dry*	1400 (approx. 50 %)	105	3.74
	1000 (approx. 60 %)	122	4.49
	800 (approx. 70 %)	139	5.17
Iron Dry*	1400 (approx. 50 %)	83	2.24
	1000 (approx. 60 %)	100	3.44
	800 (approx. 70 %)	117	3.86
Easy-Care 3.5 kg	1000	39	1.05
Cupboard Dry*	800 (approx. 40 %)	42	1.35
	600 (approx. 50 %)	51	1.65

*Test program according to DIN EN 61121.
**The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

Drum interior light *(depending on model)* ***(bulb E14, 25 W)***
The drum is illuminated after the door is opened or closed, and also after the programme is started. It goes out automatically. Replacing the bulb → *Page 10.*

Optional accessories *(order from the after-sales service using the order number)*

WZ 20160 ***Connection fittings for condensation outlet***
The condensation is conveyed directly via a hose.

WZ 20310 ***Washer-dryer stack connection set***
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space.
This connection set **must** always be used to secure the dryer to the washing machine.

WZ 20300 Same as WZ 20310, but with pull-out worktop.

WZ 20290 ***Installation underneath the worktop***
Risk of electric shock!
Instead of the appliance covering plate, you must have a metal cover fitted by an expert.

What to do if ...

If you cannot rectify a fault yourself, please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:
– **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
– **IE** 01450 2655
When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

The **Start/Stop** indicator lamp does not light up.	Mains plug plugged in? Programme selected?
The **Empty water** and **Start/ Stop** indicator lights are flashing.	Empty the condensation container. If featured, check hose for condensation outlet.
The **Clean filter** and **Start/ Stop** indicator lights are flashing.	Clean the fluff filter and/or air cooler → *Page 4/6.*
Dryer does not start.	**Start/Stop** button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
Water is running out.	Align dryer horizontally. Clean air cooler seal.
The door opens by itself.	Push the door closed until you hear it engage.
The required degree of dryness was not achieved or the drying time was too long.	Clean the fluff filter and/or air cooler → *Page 4/6.* Empty condensation container → *Page 4.* Check water outlet (if featured). Ambient temperature higher than 35 °C → airing. Air inlet may be blocked → keep unobstructed. Was an unsuitable programme selected? → *Page 7.* Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Fine layer of scale on the moisture sensors → Clean the moisture sensors → *page 6.*
Laundry damp.	Use the next drying programme up or use the timer programme as a supplement → *Page 7.* Warm laundry feels damper than it really is!
The moisture content of the room has increased significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → keep unobstructed. Ensure that the air cooler has been inserted.
Mains failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
One or more indicator lights for programme status are flashing.	Clean filter and air cooler → *Page 4/6.* Check installation conditions → *Page 8.* Switch off, leave to cool down, switch on again, restart programme.
The interior light is not working *(depending on model).*	Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screw driver) and replace the bulb. Close the cover cap. Never operate the dryer without a cover cap.

Tips on drying

Important for all drying cycles:

- To obtain a uniform drying result: sort the laundry by fabric type and drying program.
- Fasten zips, hooks and eyes. Tie loose belts, apron strings etc, together.
- Do not over-dry easy-care laundry: Risk of creasing. Allow laundry to finish drying in the air.
- Do not over-dry laundry.
- Do not iron laundry immediately after drying. Leave laundry folded up for a short while. This helps the residual moisture to distribute evenly.

First use

Drying

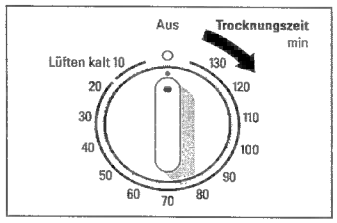

Please read this instruction manual before using the dryer for the first time:

1. Open the door.
2. Place the laundry into the empty drum.

   Ensure that the drum contains only laundry.
3. Close the door.
4. Read the **programme information** – read off the required drying time **and**
5. Set the **drying time (Trocknungszeit) selector** accordingly.
6. Set additional functions if required (see page 17).
7. Press the **Start** button.

Note

You can interrupt the drying program by opening the door.

- Close the door.
- Press the **Start** button.

It is possible to change the drying time during drying.

1. Turn **the drying time (Trockungszeit) selector** to „Off" (Aus),(to clear the drying time).
2. Select the new drying time using the **drying time (Trocknungszeit) selector**.
3. Press the **Start** button.

Selecting a program

Selecting

Your dryer offers different drying times and the additional **Low heat (Schon)** (see page 16).

Our drying programs are designed to protect your laundry with minimum energy consumption. Due to residual heat after drying, your laundry feels damper than it really is.

If the dryness of the laundry is not sufficient after cooling down, use a longer drying time or continue drying.

The following table gives drying times for 5 kg of laundry at different spin speeds for the **Cupboard dry (Schranktrocken)** programme.

Type of washing	Drying temperature	Additional function	Spin speed	
		Low heat	1200 rpm	800 rpm
			Drying time (min)	
Cottons + linens 5 kg	Cupboard dry	-	70	110
	Cupboard dry + Low heat	*	80	130
	Iron dry	-	50	90
	Iron dry + Low heat	*	60	110
Easy-care 2.5 kg			1000 rpm	800 rpm
	Cupboard dry	-	25	55
	Cupboard dry + Low heat	*	30	60
	Iron dry	-	20	40
	Iron dry + Low heat	*	25	45
Cool air				Max. 10

Deviations from the specified values may occur due to differences in the composition of the laundry, the quantity of laundry, power fluctuations and the room temperature and humidity.

Notes on laundry

Labelling of fabrics

Check the following fabric symbols:

	DRYING
	Can be dried in a tumble-dryer
	Wring out and hang on a washing line to dry
	Do not wring, hang out wet to dry
	Wring out, lay on a flat surface to dry
	Do not dry in a tumble-dryer
	Dry at normal temperatures
	Dry at low temperatures

Do not tumble-dry the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) - **they may crease**
- Dripping-wet laundry - **high energy consumption**
- Wool or fabrics containing wool.
- Observe the manufacturer's instructions.

Control panel

Drying time (Trocknungszeit) selector
For switching on and off and for selecting the drying and ventilation time

Programme information
Instructions on laundry quantity and drying times for the required drying result

The **indicator (Ein) lamp**
lights up when the dryer is switched on

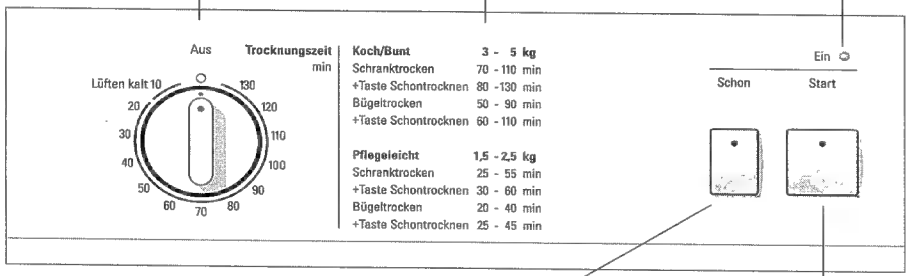

Buttons for additional functions
(if required in addition to the programme)
Low heat (Schon)
For drying delicate fabrics

Start button
To start the program

Programme information/table

Cottons + linens 3 - 5 kg	
Cupboard dry	70 - 110 min
Cupboard dry + Low heat	80 - 130 min
Iron dry	50 - 90 min
Iron dry + Low heat	60 - 110 min
Easy-care 1.5 - 2.5 kg	
Cupboard dry	25 - 55 min
Cupboard dry + Low heat	30 - 60 min
Iron dry	20 - 40 min
Iron dry + Low heat	25 - 45 min

Additional function

Low heat (Schon) button

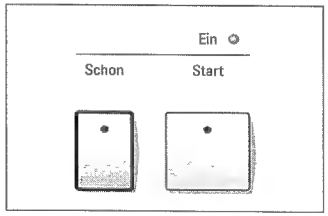

Press the **Low heat (Schon)** button for temperature sensitive fabrics (e.g. acrylics).

Observe the fabric care instructions .

The temperature is reduced.

The function remains active until the button is pressed again.

Cleaning and care

Cleaning the dryer

⚠ **Risk of explosion**

There is a risk of explosion from solvents.

Never use solvents for cleaning.

The dryer may be damaged if it is not cleaned correctly. Do not spray the dryer with a water jet. Do not use abrasive agents or general-purpose cleaners.

- ❑ Clean the housing and the control panel with a mild detergent and a soft cloth.

Fluff filter

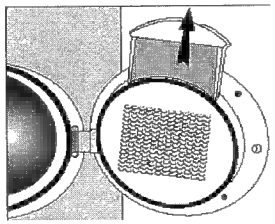

Clean the fluff filter after each drying cycle.

Bobbling (fluff) occurs when fabrics become worn. These bobbles come off during the drying cycle and collect in the fluff filter.

A clogged filter results in longer drying times and higher energy consumption.

1. Open the door.
2. Pull the filter out towards the top.
3. Remove the fluff (by drawing your hand across the filter).
4. Replace the filter (it can only be inserted one way round).
5. Close the door.

Appliance design

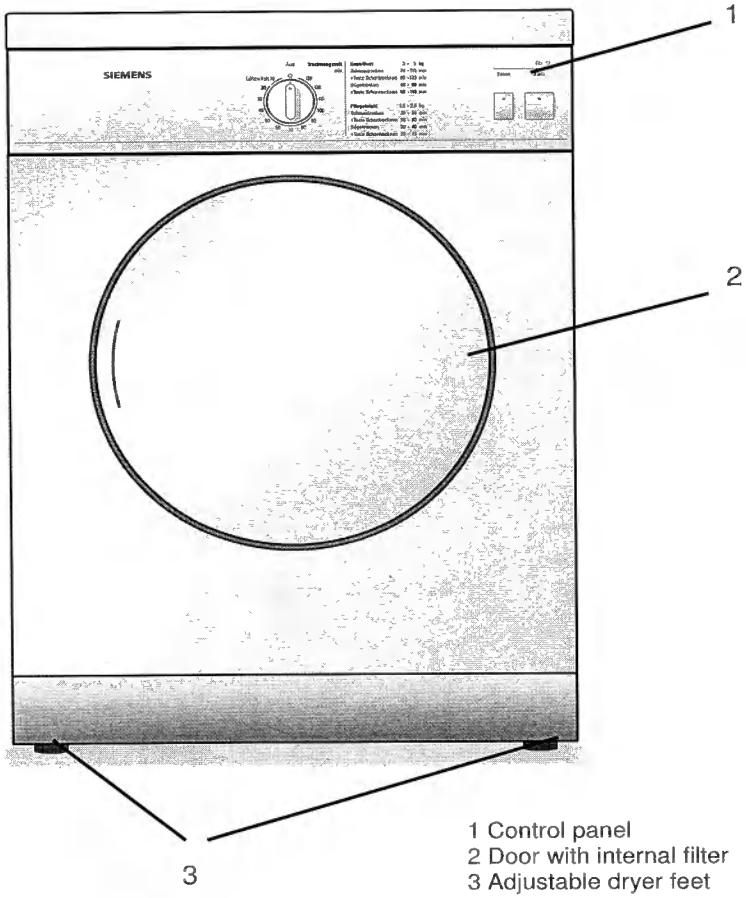

1 Control panel
2 Door with internal filter
3 Adjustable dryer feet

Table of contents

Instruction manual

Your new dryer 4
Notes on disposal 6
Disposing of packaging 6
Disposing of old dryers 6
Safety notes 7
Using the dryer correctly 7
Before using the dryer 7
Observe when drying 8
Observe at the end of the program 8
Notes on protecting the dryer 8
Environmental protection/notes on economy 9
Drying in an economical and environmentally-aware manner 9
Dryer description 10
Brief instructions 10
Appliance design 11
Control panel 12
Notes on laundry 13
Labelling of fabrics 13
Tips on drying 14
First use 15
Drying 15
Selecting a program 16
Selecting 16

Troubleshooting...

Troubleshooting...	Cause	Solution
The „on" (Ein) indicator lamp does not light up.	The dryer is not plugged in.	Plug in the dryer.
	No drying time has been set.	Select the drying time you require using the drying time selector.
	The household fuse has tripped.	Reset/replace the fuse.
The dryer does not start.	Start button has not been pressed.	Press the button.
	No drying time has been set.	Select the drying time you require using the drying time selector
	The door is not shut.	Close the door.
	The ambient temperature is below 5 °C.	Increase the room temperature.
The humidity in the room has increased significantly.	The room is not sufficiently ventilated.	Ensure sufficient ventilation.
The door opens by itself.	The locking pins are not engaged.	Push the door closed until you hear the locking pins click into place.
Drying is not satisfactory or the drying time is too long.	The filter is blocked.	Clean the filter (page 18).

Troubleshooting..	Cause	Solution
Drying is not satisfactory	Ambient temperature is above 30° C.	Ensure that there is sufficient ventilation.
	The wrong drying time has been set.	Set the drying time using the programme information (from page **Error! Bookmark not defined.**).
	Power cut for several hours	Restart the program by pressing the Start button again.
	The laundry feels damper than it really is.	Reset the drying time if the laundry has not been dried sufficiently after cooling down.
Laundry is not dried evenly	There was - too much laundry - only large items of laundry - items of laundry with different fibre constructions are being dried.	Dry - small amounts of laundry - large and small items together - items according to their fibre construction.
Condensation in the exhaust air hose.	The exhaust air hose is too long.	Arrange the dryer so that the exhaust air hose is no more than 2 m long.

⚠ Danger, electrical current

Repairs must only be carried out by the aftersales service or an authorised expert.

If you cannot rectify a fault yourself or a repair is necessary:

- ❑ Set the **drying time (Trocknungszeit) selector** to **Off (Aus)**.
- ❑ Remove the plug from the socket.

Contact the aftersales service (page 19).

SIEMENS

Instruction manual

en

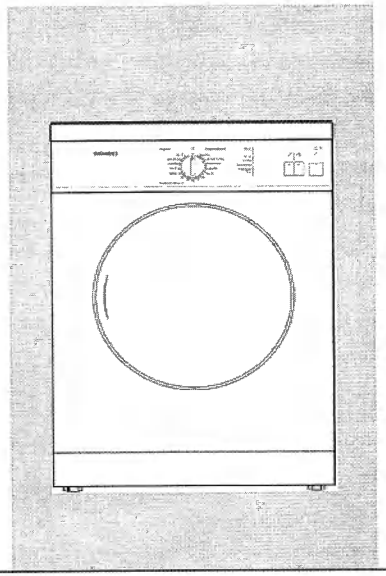

Dryer

WTXL1000